

CI770A / CI770C

**Intel Mobile Ivy Bridge processor +
(PCH)QM77 / DDR3 1066/1333 MT/s /
LAN / DVI/ HDMI /Audio /USB / PCIe mini card**

**All-In-One
Intel Mobile Ivy Bridge CPU
VGA, DVI, HDMI, LVDS, PCIe mini card
Multi-COM Board, Audio, LAN, SATA, USB**

NO. CI770A / CI770C

Release date: FED. 10. 2014

Contents

CI770A/C	
Warning!.....	1
Hardware Notice Guide	2
CHAPTER 1 GENERAL INFORMATION	4
1-1 MAJOR FEATURE.....	5
1-2 SPECIFICATION	6
1-3 INSTALLING THE CPU/ NORTH BRIDGE CHIP HEATSINK.(SOCKET VERSION)...	7
1-4 VERTICAL SODIMM ASSEMBLY GUIDE	9
1-5 INSTALLING THE CFAST (OPTION)	10
1-6 DIRECTIONS FOR INSTALLING THE MINI CARD	11
1-7 PACKING LIST (CI650A/C)	12
CHAPTER 2 HARDWARE INSTALLATION	13
2-1 UNPACKING PRECAUTION	13
2-2 UNPACKING CHECKUP	14
2-3 DIMENSION-CI650A/C (200 x 150mm)	15
2-4 LAYOUT-CI650A/C	16
2-5 DIAGRAM-CI650A	17
2-5-1 DIAGRAM-CI650C	18
2-6 INSTALL MEMORY	19
2-7 LIST OF JUMPERS	20
2-8 JUMPER SETTING DESCRIPTION	21
2-9 CMOS DATA CLEAR	21
2-10 JSB2: ME RTC DATA CLEAR	22
2-11 JSP1: AT / ATX POWER SELECT	23
2-12 JSC2,JSC21 / 22 / 23 / 24; COM2 RS232 / RS422 / RS485 SELECT	23
2-13 COM PORT PIN9 SELECT RI SIGNAL OR VOLTAGE SOURCE	24
2-14 JVL1: LVD PANEL POWER SELECT	25
2-15 JVP1: LVDS PANEL INVERTER POWER SELECT	25
2-16 JVU14: USB PORT 14 VOLTAGE SELECT	26
2-17 JSD1: DPC DUTY SET	26
CHAPTER 3 CONNECTION	27
3-1 LIST OF CONNECTORS	27
3-2 FAN CONNECTOR	30
3-3 SATA INTERFACE	30
3-3-1 SSD USE AT SATA6 CHANNEL (TBD)	30
3-4 CFAST CARD READER (OPTION)	31
3-5 USB PORT	31
3-6 CUL1 / CUL2 LAN + USB CONNECTOR	32
3-7 PS2 KB / MS	33

3-8 LPT INTERFACE (LINE PRINT TERMINAL)	33
3-9 DVI-D / VGA / HDMI / DP / LVDS CONNECTOR	34
3-10 COM PORT CONNECTOR	35
3-11 AUDIO PORT CONNECTOR	38
3-12 AUDIO AMPLIFIER CLESS AB TWO CHANNEL 2W / CH	38
3-13 SPDIF DIGITAL PHOTO OUT CONNECTOR	39
3-14 DIGITAL INPUT / OUTPUT / WATCH DOG TIME	37
3-14-1 IO DEVICE: F75111 UNDER DOS	41
3-14-2 IO DEVICE: F75111 UNDER WINDOWS	42
3-14-3 IO DEVICE: F75111 VB6 UNDER WINDOWS	45
3-14-4 IO DEVICE: F75111 UNDER LINUX	47
3-15 LVDS INTERFACE CONNECTOR	51
3-16 PANEL POWER CONNECTOR	51
3-17 TOUCH SCREEN DEVICE	52
3-18 DC 12V-IN EXTERNAL CONNECTOR	53
3-19 DC +5/+12V OUTPUT CONNECTOR	53
3-20 I ² C BUS INTERFACE	54
3-21 HDMI INTERFACE	54
3-22 MINI CARD / SIM CARD	55
3-23 FRONT PANEL PORT HEADER	56
3-24 SIM CARD	56
3-25 SODIMM SOCKET	56
3-26 PCI GOLD FINGER PIN DEFINE	57
CHAPTER 4 INTRODUCTION OF BIOS	58
4-1 ENTER SETUP	58
4-2 BIOS MENU SCREEN	59
4-3 FUNCTION KEYS	59
4-4 GETTING HELP	60
4-5 MENU BARS	60
4-6 MAIN	60
4-7 ADVANCED	61
4-7-1 ACPI SETTINGS	62
4-7-2 S5 RTC WAKE SETTINGS	63
4-7-3 CPU CONFIGURATION	64
4-7-4 SATA CONFIGURATION	65
4-7-4-1 SATA MODE SELECTION-AHCI MODE	65
4-7-4-1-1 SOFTWARE FEATURE MASK CONFIGURATION	66
4-7-4-2 SATA MODE SELECTION-RAID MODE	66
4-7-5 USB CONFIGURATION	67
4-7-6 SMART SETTINGS	68

4-7-7 F71869 SUPER IO CONFIGURATION	68
4-7-7-1 SERIAL PORT 1 CONFIGURATION & SERIAL PORT 2 CONFIGURATION	69
4-7-8 F71869 H/W MONITOR	70
4-7-9 F81216 SECOND SUPER IO CONFIGURATION	70
4-7-9-1 SERIAL PORT 3-6 CONFIGURATION	71
4-7-10 SERIAL PORT CONSOLE REDIRECTION	72
4-7-11 NETWORK STACK	72
4-8 CHIPSET	73
4-8-1 PCH-IO CONFIGURATION	73
4-8-1-1 PCI EXPRESS CONFIGURATION	74
4-8-1-1-1 MINI PCIE 1/2	74
4-8-1-1-2 PCI EXPRESS X 1	75
4-8-1-2 USB CONFUGURATION	76
4-8-1-3 PCH AZALIA CONFUGURATION	77
4-8-2 SYSTEM AGENT(SA) CONFUGURATION	77
4-8-2-1 GRAPHICS CONFUGURATION	78
4-8-2-1-1 LCD CONTROL	79
4-9 BOOT	80
4-9-1 CSM PARAMETERS	80
4-10 SECURITY	81
4-11 SAVE & EXIT	82
CHAPTER 5 DRIVER INSTALLATION.....	83
5-1 INF INSTALL INTEL IVY BRIDGE CHIPSET DRIVER	85
5-2 VGA INSTALL INTEL IVY BRIDGE VGA DRIVER	87
5-3 SOUND INSTALL REALTEK HIGH DEFINITION AUDIO DRIVER	89
5-4 USB 3.0 INSTALL INTEL USB 3.0 EXTENSIBLE HOST CONTROLLER DRIVER ...	90
5-5 ME INSTALL INTEL MANAGEMENT ENGINE INTERFACE DRIVER	92
5-6 HOW TO UPDATE BIOS	94
APPENDIX A:POWER CONSUMPTION TEST	96
APPENDIX B:RESOLUTION LIST	97

Copyright

This manual is copyrighted and all rights are reserved. It does not allow any non authorization in copied, photocopied, translated or reproduced to any electronic or machine readable form in whole or in part without prior written consent from the manufacturer.

In general, the manufacturer will not be liable for any direct, indirect, special, incidental or consequential damages arising from the use of inability to use the product or documentation, even if advised of the possibility of such damages.

The manufacturer keeps the rights in the subject to change the contents of this manual without prior notices in order to improve the function design, performance, quality, and reliability. The author assumes no responsibility for any errors or omissions, which may appear in this manual, nor does it make a commitment to update the information contained herein.

Trademarks

Intel is a registered trademark of Intel Corporation.

Award is a registered trademark of Award Software, Inc.

All other trademarks, products and or product's name mentioned here are for identification purposes only, and may be trademarks and/or registered trademarks of their respective companies or owners.

©Copyright 2014

All Rights Reserved.

User Manual edition 0.1, FED. 10 . 2014

Warning !

1. Battery
Battery on board is consumables. We doesn't guarantee the life time of it.
2. Fanless solution with HDD
Please be aware of specification & limitation for HDD when fanless solution is implemented.
3. We will not give further notification if there is any change about the product information and the manual.
4. SATA does not support Hot SWAP.
5. There would be $\pm 20\%$ difference of WDT at room temperature.
6. Please make sure the voltage specification meet the requirement of the equipment before plugging into the power.
7. SSD has 2 types, commercial grade and industrial grade, which provide different read/write speed, operation temperature and life cycle.
Please contact sales for further information before ordering.
8. Caution ! Please notice that the heat dissipation problem could cause the MB system unstable. Please handle the heat dissipation properly when buying single MB.
9. Please avoid to approach the heat sink area and prevent being scalded when using the Fanless products.
10. If the users repair, modify or destroy any component of product unauthorized, We would not take responsibility or provide warranty.
11. DO NOT apply any other material onto the thermal pad in case reducing cooling performance.
12. It is important to install a System Fan toward the CPU to prevent the possibility of overheating / system hang up issues from Cedar view-D series of motherboard or else customer is required to have well cooling system to dissipate heat from CPU.

* Hardware Notice Guide

1. Before installing the power supply with this motherboard, please attach the 12V/DC (4 pin connector)of the adapter to motherboard first.
After that, plug the adapter power to AC outlet.
Always normally shut down the computer before you move the system unit or remove the power supply from the motherboard.
Please unplug the 12V/DC (4 pin connector) of the adapter from motherboard first.
Then unplug the adapter from the AC outlet.
Please refer to procedure from the photo 1
2. There will be high possibility to burn out the CPU if you change/ modify any parts of the CPU cooler.
3. Please wear wrist strap and attach it to a metal part of the system unit before handling a component.
You can also touch an object that is of ground connection or with metal surface if you don't have wrist strap.
4. Please be careful when you handle this product. Pay attention to & don't touch the sharp-pointed components at the bottom PCB .
5. Please pay attention to this: Remove or change any components form the motherboard will VOID the warranty of the motherboard you purchased .
6. Before you install/remove any components or make any jumper setting on the motherboard, please make sure to disconnect the power first.
(Please follow the instructions as of this guide)
7. Please follow this instruction carefully when using the "POWERON after PWR-Fair" function.
When the DC power adaptor runs out of power, unplug it from the DC current;
when power returns plug it back in only after 5 seconds. If there is a power outage,
unplug it from the AC current, when power returns plug it back in only after 30 seconds.
Otherwise it will cause system locking or serious damage.

Remark 1:



Always insert/unplug the 12V/DC (4 pin connector) horizontally & directly from the motherboard.

DO NOT twist the 12V/DC (4 pin connector) gently, it is designed to fit snugly .


Moreover, erratic pull / push testing with the DC Jack might cause the unpredictable damage to the component & system unit.

Photo 1

Insert

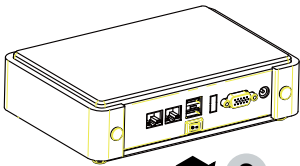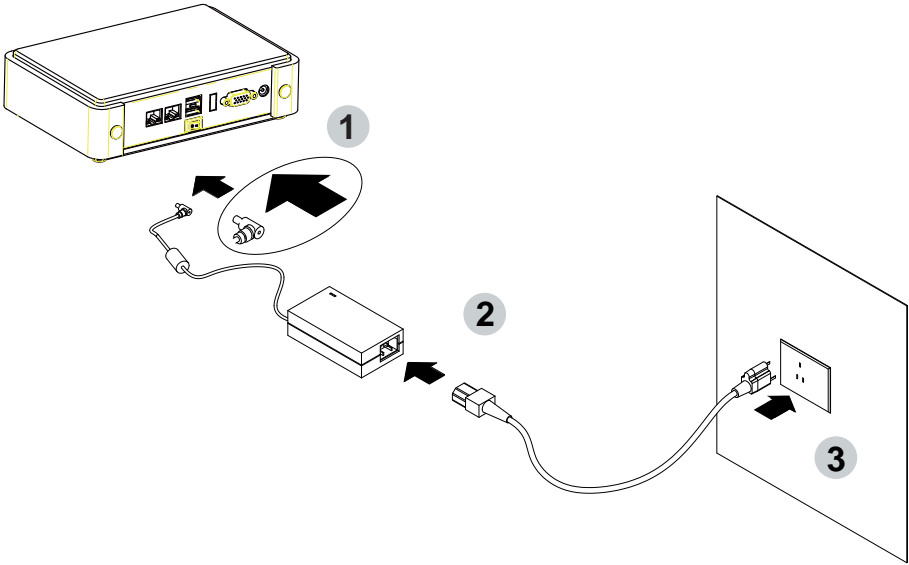

Unplug

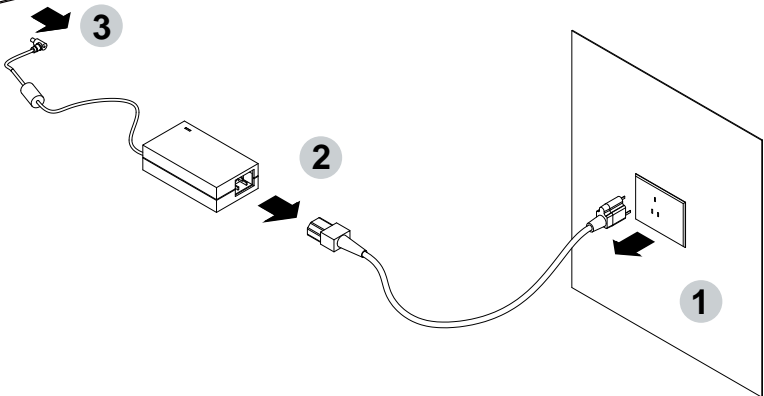

Chapter-1

General Information

The CI770A/C is All-In-One board which could apply to the use of Networking, POS or Automation Control Board. It is designed to combine all necessary input and output affects interfaces, which makes it to be ideal All-In-One control board for the demand of Networking, POS and Automation Control applications.

High-performance and power-efficient communication platform, the embedded motherboard of CI770A/C is specially designed for advanced POS systems where the economical use of power is in high demand. Also, the high performing CI770A/C comes with two DDR3 1066/1333 MHz SO-DIMM slots with up to 16GB memory and four SATA ports. This motherboard will ensure the high performance levels required for today's most popular POS/Automation control applications including POS, ATM, and Panel PC applications.

CI770A/C has Intel LAN chipset with 10/100/1000 Mbps Ethernet for seamless broadband connectivity. With the Wake-On LAN function and the PXE function in BIOS for Intel LAN chipset, it is perfect control board for networking devices

CI770A/C also supports with multi-COM ports of five RS232 and one RS232/422/485 to meet the needs of connectivity for multiple COM ports. In addition, there are multi-ports of Hi-Speed USB 3.0/2.0 to enhance the host controller interface which will ensure the high performance level and flexible expansion. The CFast Card socket (option) supports SATA interface 2.0. A single Flash chip holds the system BIOS, and you can change the Flash BIOS by the Utility Update.

The supported display interfaces include DVI-D, VGA, LVDS and HDMI. With a small footprint of only 200 x 150 mm and advanced performance in both computing and graphics, this board meets the requirement of system developers in the gaming, POS, digital signage, and server market segment.

1-1 Major Feature


1. Intel Mobile Ivy Bridge processor in Socket G2 package (rPGA988B)
2. Intel Panther Point Platform Controller Hub (PCH) QM77 and Integrated Graphic Chip
3. Support 2 x DDR3 SO-DIMM socket (up to 16GB)
4. On board SSD flash memory 2 / 4 / 8/16/32/64 GB (option)
5. Support 2 x Intel GbE
6. 18/24 bits dual channel LVDS Interface on Board
7. Support 1 x CFAST Card Socket on Board (option)
8. Support 4 x SATA ports (2 x SATA 2.0 and 2 x SATA 3.0)
9. Support 2 x PCIe mini card for USB and PCIe interface
10. On board DC-IN +12V Power Supply
11. Compact PCB Dimension: 200 x 150 mm
12. 2 x SIM Card Socket (for 3G module use)
13. USB interface Touch screen controller, support 4-, 5-, 8- wire Analog Resistive touch screen, Resolution is up to 2048 x 2048 (option)
14. Support 4 x external USB 3.0/2.0 & 5 x internal USB2.0

1-2 Specification


1. **CPU:** Intel Mobile Sandy Bridge processor in Socket G2 package (rPGA988B)
2. **Chipset:** Intel Panther Point Platform Controller Hub (PCH) QM77
3. **Memory:** 2 x DDR3 SO-DIMM socket (up to 16GB)
4. **Graphics:** Integrated with Intel Mobile Sandy Bridge Processor
5. **SIO and UARTs:** Fintek F71869A and F81216AD I/O chipset
6. **NAND flash memory (Option):** Support One CFast card socket type II for SATA interface
On board SATA SSD 2/4/8/16/32/64 GB (Option)
7. **SATA:** 4 x SATA ports (2 x SATA 2.0 and 2 x SATA 3.0)
8. **LAN Interface:** One Intel 82579LM GbE LAN PHY and one Intel 82574L GbE LAN
9. **Storage Device:** 1 x 24pin CFast card socket
10. **Serial Port:** 5 x RS232 or 485 + 1 x RS485 / 422 / 232
11. **USB:** 4 x external USB 3.0/2.0 & 5 x internal USB2.0
12. **Sound:** Intel HD Audio Specification 1.0 Two channel sound
13. **LVDS:** support 24bits/2ch LVDS interface
14. **WDT / DIO:** Hardware watch dog timer support, 0~255 sec programmable
Hardware digital Input & Output, 8 x DI / 8 x DO
15. **Touch screen (optional):** C8051F321 USB/COM interface touch screen controller,
support 4-, 5-, 8- wire Analog resistive touch screen
16. **Audio Amplifier:** ANPEC APA4863 Class AB 2.2W Audio amplifier
17. **Expansion interface:** 1 x PCI Gold finger & 1 x PCIe Mini card for PCIe by one and
USB interface & 1 x PCIe Mini card for PCIe by one OR mSATA and USB interface
18. **BIOS:** AMI UEFI BIOS
19. **Dimension:** 200 x 150 mm
20. **Power:** On board DC-IN Convert into system power +12VAD/±5% to +5V/±5%
and +3.3V/±5%
21. **Two 3G SIM card socket**

1-3 Installing the CPU / PCH Heatsink. (Socket Version)


1. Install CPU bracket under the CPU first.

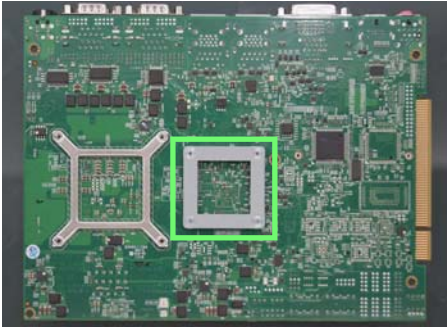


2.1. Locate Pin1 in the socket, look for a golden narrow.

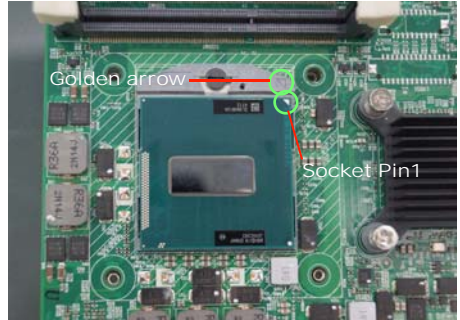


2. Use screw driver and screw the socket screw in anti-clockwise direction.

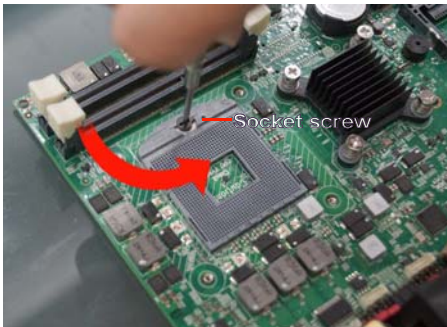


2.2. Lock the CPU socket by securing the screw in an anti-clockwise direction .

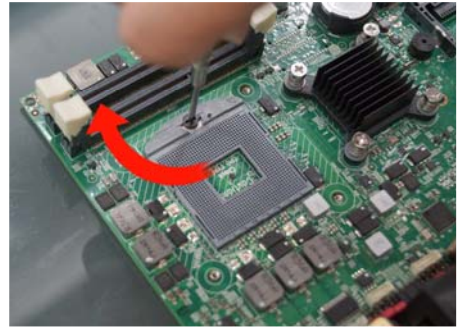


3. Peel-off the Elastic Silicone sticker under the Heat Sink.

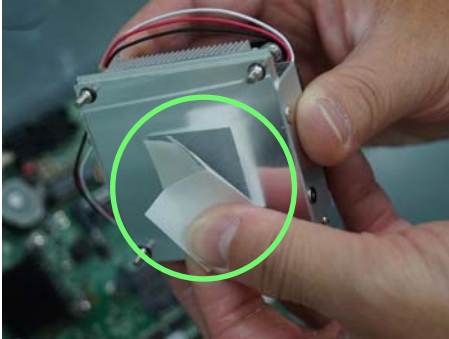

3.2 Insert the system fan power cable to the pin header (FAN1) on board.

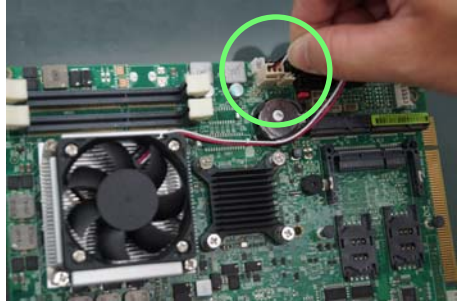


3.1 Tighten the HEAT SINK on the motherboard.
Pay attention to tighten the screws diagonally.

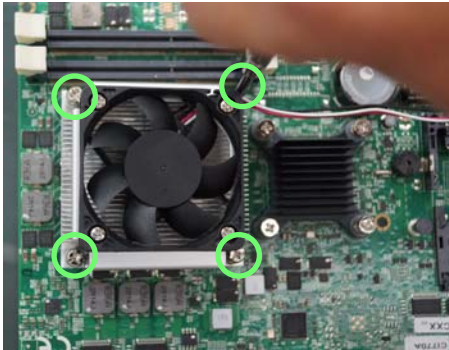


1-4 Vertical SODIMM assembly guide

1. Install the memory into SODIMM.

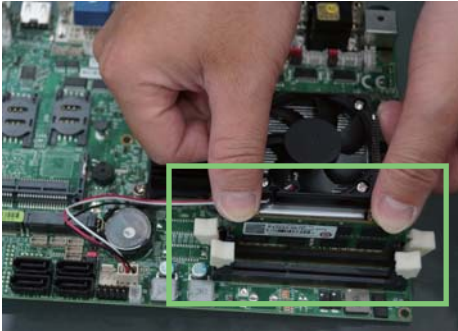


2. Press down firmly to ensure the memory is locked.

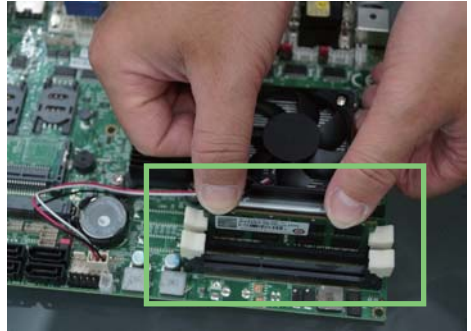

Uninstall

1. Pull open both sides of the memory slot.

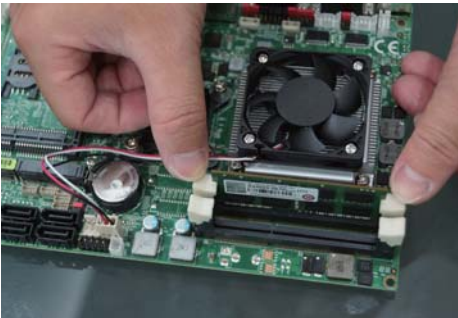


2. Take out the memory.



1-5 Installing the CFast (option)

1. Install the CFast card into the CFast socket.

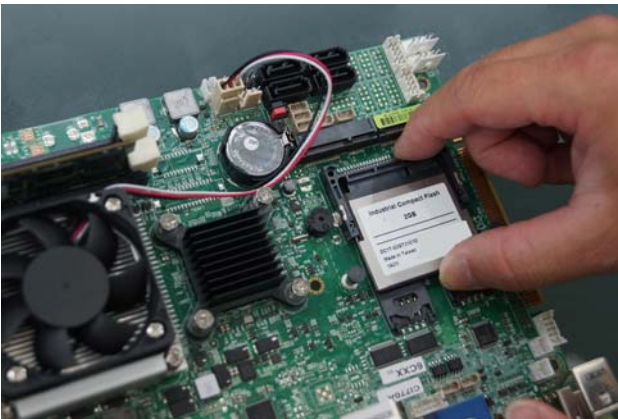

1-6 Directions for installing the Mini Card



1. Unscrew the screw on the board




2. Plug in the Mini Card in a 45° angle



3. Gently push down the Mini Card and screw the screw back.

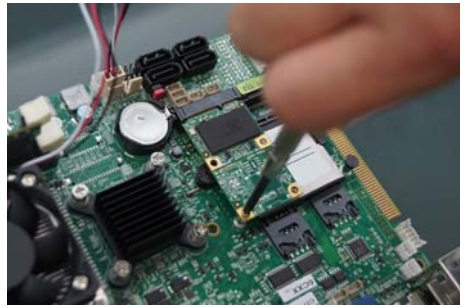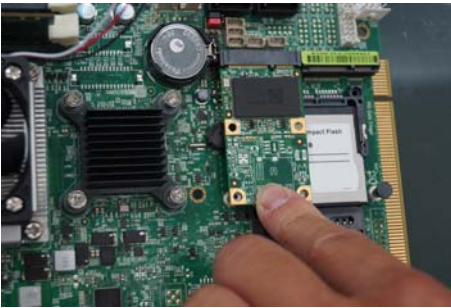

1-7 Packing List-CI770A/C

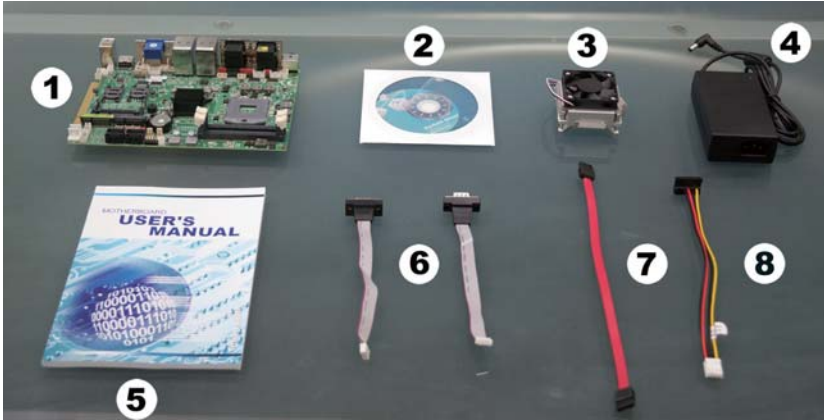

CI770A/C

	Material Code	Description	Detail Specification	Quantit
1	7G1901-1261001-0	MB-CI770A-6CXX-001	LF,CI770A-6CXX,Rev.:001	1
2	6G8006-2341-0100	DVD	LF,Intel Cedarview-D+ICH10R/NM10	1
3	6G7300-4526-0100	Cooler	LF,H=26.5mm,4.5Krpm,55W,CI770	1
4	6G5212-1203-0200	120W Power Adapter,12V	LF,M4p/Lock,FSP120-AHAN1,FSP	1
5	6G8001-2182-0400	Manual	LF,M/B,CI770A/C	1
6	6G6001-2005-0100	COM FK	LF,2.0 2*5P/DB9P,L=15cm	2
7	6G6001-2203-0100	SATA DATA Cable (Red)	LF,L=25cm	1
8	6G6003-1009-0100	SATA Power Cable	LF,L=25cm,1*5/2.0 to 180° SATA 15p	1

*The packing list above is for the users who purchase single motherboard. The users who purchase the board with chassis may refer to the packing list in the Assembly Guide.

Please contact with your dealer if any of these items is missing or damaged on delivery. And please keep all parts of the delivery package with packing materials in case if you need to deliver or store the product in the future.

Chapter-2

Hardware Installation

This chapter provides the information how to install the hardware of CI770A/C. Please follow section 1-6, 2-1 and 2-2 to check the delivery package and unpack carefully. Please follow the jumper setting procedure.

2-1 Unpacking Precaution

The CI770A/C board has been well packed with an anti-static bag to protect its sensitive components and circuitry from damage due to static electric discharge.

NOTE!

1. Do not touch the board or any other sensitive components without all necessary anti-static protection.
2. Please pay attention to the voltage limitation of DC-IN12 V \pm 5 %.
Overuse of DC-IN voltage limitation or change to another power adapter (not provided with this system) will VOID warranty.

You should follow these steps to protect the board from the static electric discharge whenever you handle the board:


1. Ground yourself by a grounded wrist strap at all times when you handle the CI770A/C.
Well secure the ALLIGATOR clip of the strap to the end of the shielded wire lead from a grounded object. Please put on and connect the strap before handling the CI770A/C for harmlessly discharge any static electricity through the strap.
2. Please use anti-static pad to put any components, parts, or tools on the pad whenever you work on them outside the computer. You may also use the anti-static bag instead of the pad. Please ask your local supplier for necessary parts on anti-static requirement.
3. Do not plug any connector or set any jumper when the power is on.

2-2 Unpacking checkup


First of all, please follow all necessary steps of section 2-1 to protect CI770A/C from electricity discharge. With reference to section 1-7, please check the delivery package again with following steps:

1. Unpack the CI770A/C board and keep all packing material, manual and driver disc etc, do not dispose !
2. Is there any components lose or drops from the board?
DO NOT CONTINUE TO INSTALL THIS BOARD!
CONTACT THE DEALER YOU PURCHASED THIS BOARD FROM, IMMEDIATELY.
3. Is there any visible damage on the board?
DO NOT CONTINUE TO INSTALL THIS BOARD!
CONTACT THE DEALER YOU PURCHASED THIS BOARD FROM, IMMEDIATELY.
4. Check your optional parts (i.e. DDR, CF etc.), all necessary jumpers setting to jumper pin-set, and CMOS setup correctly.
Please also refer to all information of jumper settings in this manual.
5. Check your external devices (i.e. Add-On-Card, Driver Type etc.) for complete add-in or connection and CMOS setup correctly.
Please also refer to all information of connector connection in this manual.
6. Please keep all necessary manual and driver disc in a good condition for future re-installation if you change your Operating System.


2-3 Dimension-CI770A/C 200 x 150mm

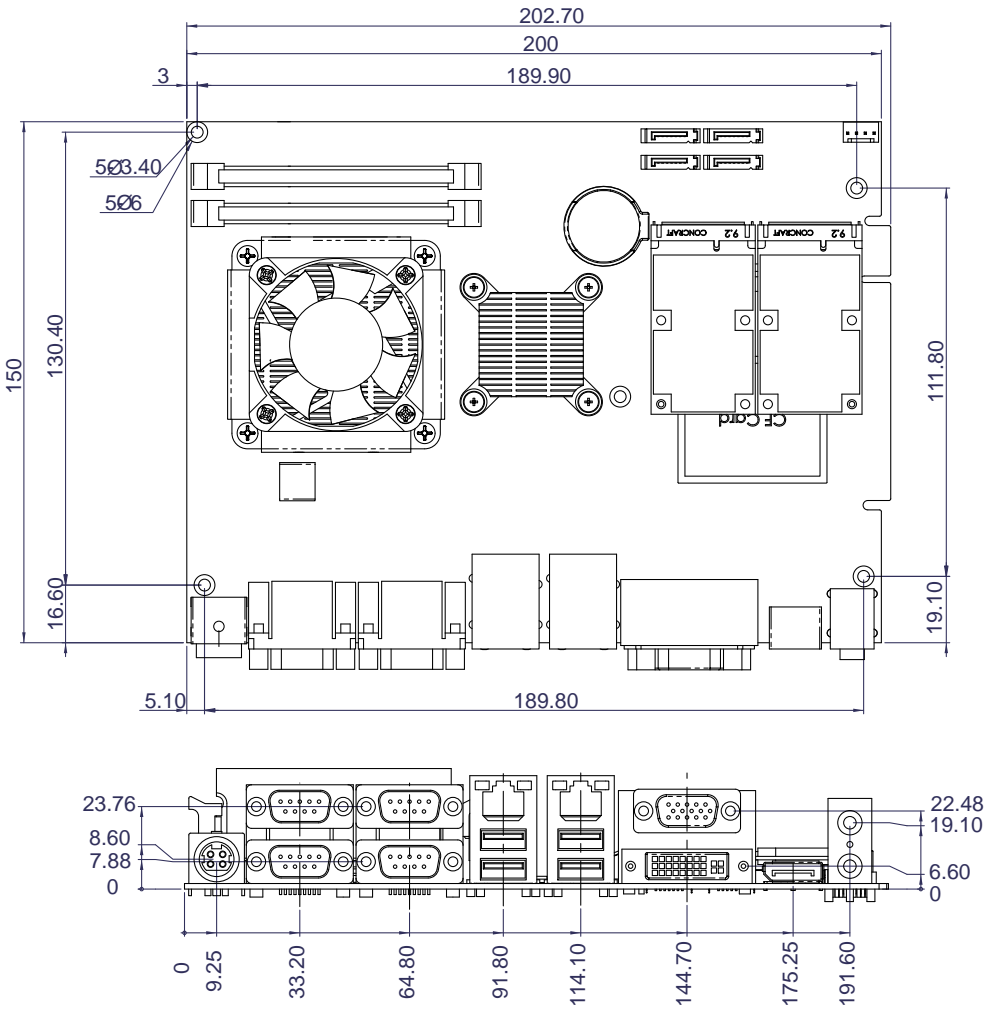


2-4 Layout- CI770A/C

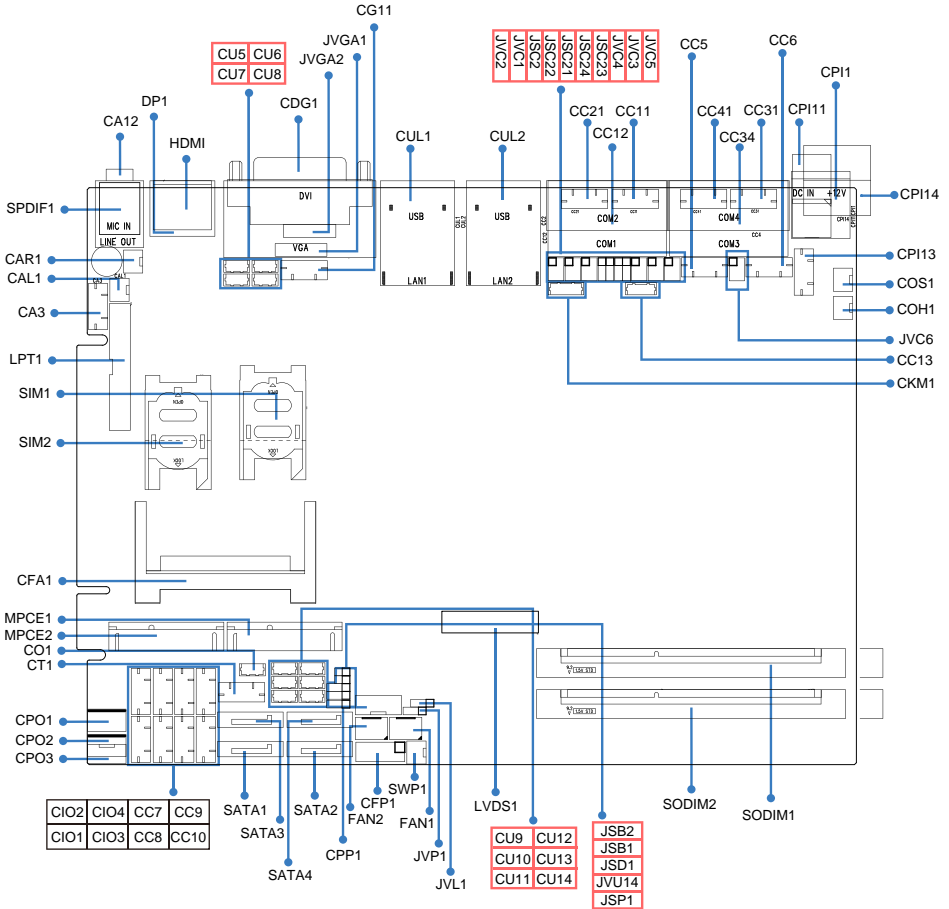

2-5-1 Diagram- CI770C

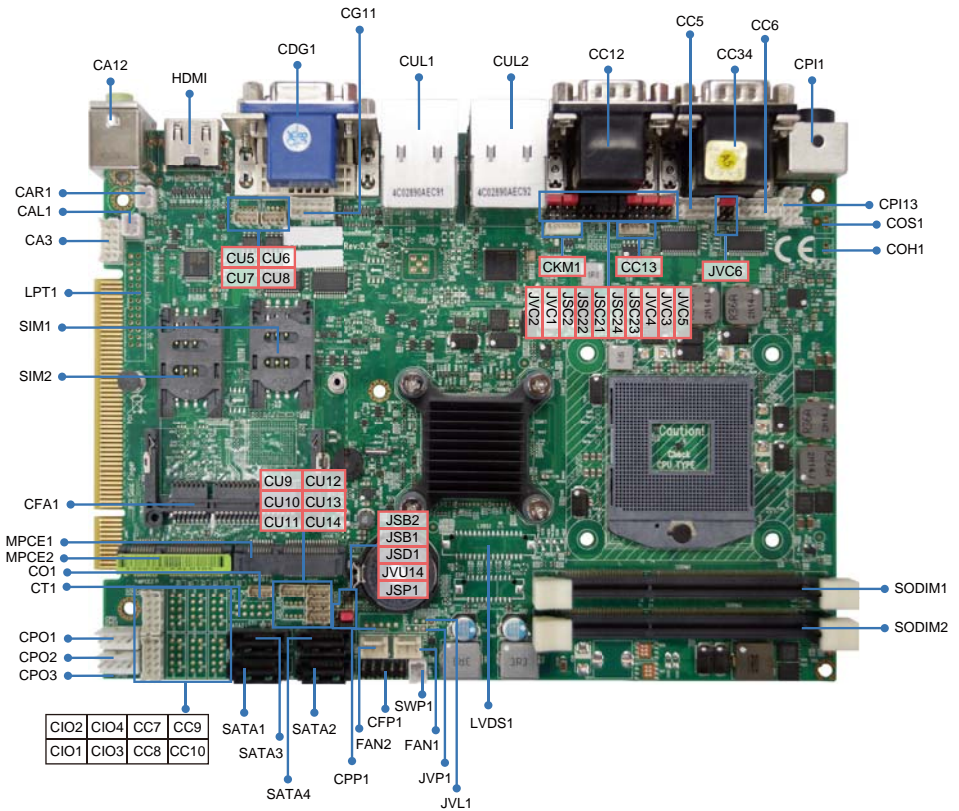

Back Panel

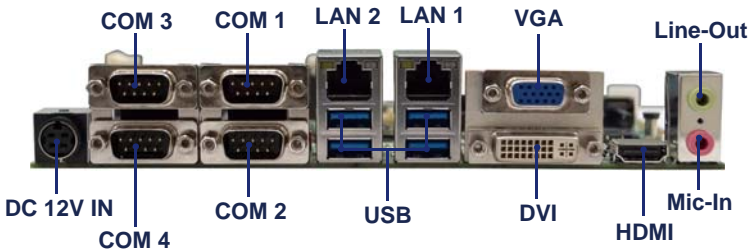

2-6 Install Memory

This motherboard provides one 204-pin Small Outline Dual In-line Memory Module (SODIMM) socket for memory expansion available maximum to 2GB/4GB/8GB DDR3 SDRAM. DDR3 clock supports: DDR3 1066/1333MT/S

Valid Memory Configurations

DIMM1	System Accept or Not	Total Memory
		Max.
DS/SS	Accept	16GB

DS: Double Sided DIMM

SS: Single Sided DIMM

NOTE!

**The detected memory size is less than actual installed memory size since some memory has been allocated for system use.
That's how PC works with system memory.**

Please refer to page 9 for installation of memory module.

NOTE!

When you install DIMM module fully into the DIMM socket, the eject tab should be locked into the DIMM module very firmly and fit into its indentation on both sides.

Please refer to page 9 for installation of memory module.

WARNING!

Once you hear " Beep Beep Beep" sounds after turning on the power , please check if the DRAM is installed properly or not.

2-7 List of Jumpers

1. JSB1: CMOS clear select
2. JSB2 : ME RTC clear select
3. JSC2,JSC21/22/23/24: COM2 RS232/422/485 select
4. JSP1: ATX / AT Power type select
5. JSD1: DPC Duty select
6. JVC1: COM1 voltage select
7. JVC2: COM2 voltage select
8. JVC3: COM3 voltage select
9. JVC4: COM4 voltage select
10. JVC5: COM5 voltage select
11. JVC6: COM6 voltage select
12. JVL1: LCD Panel power select
13. JVP1: LVDS Panel Inverter power select
14. JVU14: USB14 voltage select

2-8 Jumper Setting Description

A jumper is ON as a closed circuit with a plastic cap covering two pins. A jumper is OFF as an open circuit without the plastic cap. Some jumpers have three pins, labeled 1, 2, and 3. You could connect either pin 1 and 2 or 2 and 3.

The below figure 2.2 shows the examples of different jumper settings in this manual.

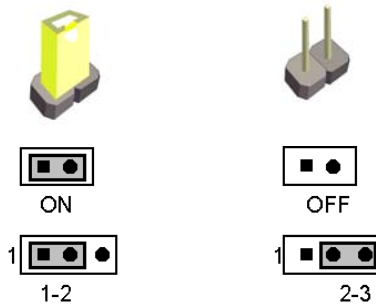


Figure 2.2

All jumpers already have its default setting with the plastic cap inserted as ON, or without the plastic cap as OFF. The default setting may be referred in this manual with a " * " symbol .

2-9 JSB1: CMOS Data Clear

A battery must be used to retain the motherboard configuration in CMOS RAM. Close Pin1 and pin 2 of JSB1 to store the CMOS data.

To clear the CMOS, follow the procedures below:

1. Turn off the system and unplug the AC power
2. Remove DC 12V power cable from DC 12V power connector
3. Locate JSB1 and close pin 1-2 for few seconds
4. Return to default setting by opening pin 1-2
5. Connect DC 12V power cable back to DC 12V Power connector

Note: Do not clear CMOS unless

- 1. **Troubleshooting**
- 2. **Forget password**
- 3. **You fail over-clocking system**

JSB1	Description
*open	*Normal Set
short	CMOS Data clear

Note: normal work is open jumper



JSB1



*Open



Short

2-10 JSB2: ME RTC Data clear

A battery must be used to retain the motherboard configuration in ME RAM. Close Pin1 and pin 2 of JSB2 to store the ME data.

To clear the ME, follow the procedures below:

- 1. Turn off the system and unplug the AC power
- 2. Remove DC 12V power cable from DC 12V power connector
- 3. Locate BAT1 and Remove Li battery
- 4. Locate JSB2 and close pin 1-2 for few seconds
- 5. Return to default setting by opening pin 1-2
- 6. Install Li battery to BAT1 connector
- 7. Connect DC 12V power cable back to DC 12V Power connector

JSB2	Description
*open	*Normal Set
short	CMOS Data clear

Note: normal work is open jumper



JSB2




*Open



Short


2-11 JSP1: AT / ATX power select

JSP1	Description
*1-2	*ATX Power mode
2-3	AT Power mode

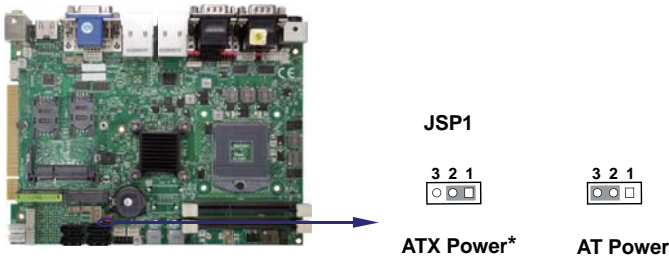

2-12 JSC2, JSC21/22/23/24: COM2 RS232/RS422/RS485 select

JSC2	JSC21	JSC22	JSC23	JSC24	Description
*1-2	*1-2	*1-2	*1-2	*1-2	RS232*
3-4	2-3	2-3	2-3	2-3	RS422
5-6	2-3	2-3	2-3	2-3	RS485

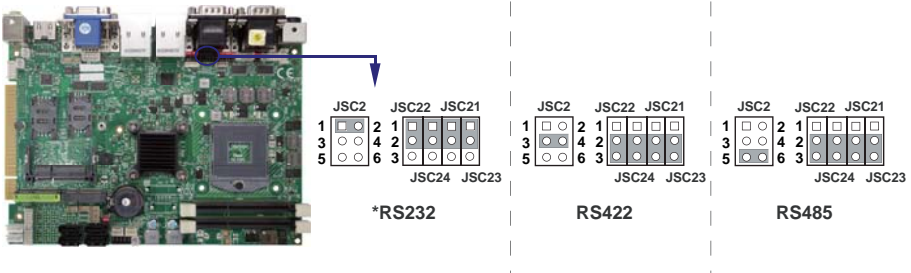


2-13 COM port pin9 select RI signal or Voltage source

JVC1: COM1 PIN9 select JVC2: COM2 PIN9 select
 JVC3: COM3 PIN9 select JVC4: COM4 PIN9 select
 JVC5: COM5 PIN9 select JVC6: COM6 PIN9 select

JVC1/2/3/4/5/6	Description
*1-2	COM port pin9 use RI signal
3-4	COM port pin9 use +5V voltage
5-6	COM port pin9 use +12V voltage

Note : 1. Note : Attention ! Check Device Power in spec.


2. If want to use +5V/+12V need check system power design spec.

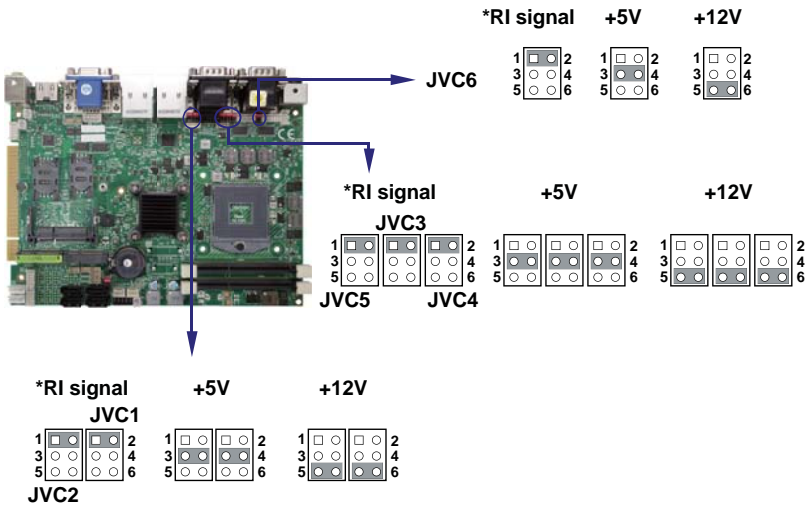

2-14 JVL1: LVD panel power select

JVL1	Description
1-2	+5V
*2-3	*+3.3V

Note : Attention ! Check Device Power in spec.
JVL1 For eDP and LVDS panel power setting

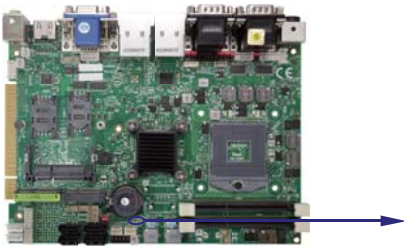

JVL1



+5V




+3.3V*

2-15 JVP1: LVDS Panel Inverter power select

JVP1	Description
1-2	+12V
*2-3	*+5V

Note : Attention ! Check Device Power in spec.

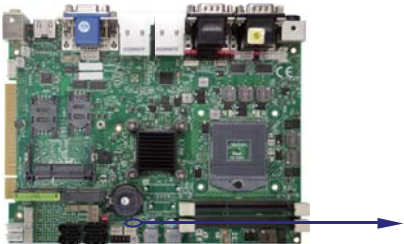

JVP1



+12V




+5V*

2-16 JVU14 : USB Port 14 Voltage select

JVU14	Description
*1-2	*+5V
2-3	+3.3V

Note : Attention ! Check Device Power in spec.

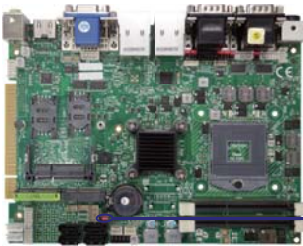

JVU14



+5V*



+3.3V

2-17 JSD1: DPC Duty set

JSD1	Description
1-2	Low 0% (Low level)
*2-3	*Hi 100% (3.3V level)

Note: for Panel backlight dimming default active set



JSD1



Low



3.3V*

Chapter-3

Connection

This chapter provides all necessary information of the peripheral's connections, switches and indicators. Always power off the board before you install the peripherals.

3-1 List of Connectors

- CA12: Mic-in (down side) / Line out (up side) phone jack.
- CA3: Line-out/Line-in/Mic-in 2x5 pin (2.0mm) wafer.
- CAL1: Amplifier Line-out Left channel 2pin (2.0mm) wafer.
- CAR1: Amplifier Line-out Right channel 2pin (2.0mm) wafer.
- SPDIF1: SPDIF audio output connector. (Option)
- CC12: COM1 (up side)/COM2 (down side) dual DB9p connector.
- CC11: COM1 2x5pin (2.0mm) wafer (The location share with CC12).
- CC13: COM1 1x5pin (1.25mm) wafer.
- CC2: COM2 DB9p connector (The location share with CC12).
- CC21: COM2 2x5pin (2.0mm) wafer (The location share with CC12).
- CC34: COM3 (up side)/COM4 (down side) dual DB9p connector.
- CC31: COM3 2x5pin (2.0mm) wafer (The location share with CC34).
- CC4: COM4 DB9p connector (The location share with CC34).
- CC41: COM4 2x5pin (2.0mm) wafer (The location share with CC34).
- CC5: COM5 2x5pin (2.0mm) wafer.
- CC6: COM6 2x5pin (2.0mm) wafer.
- CC7: COM7 2x5pin (2.0mm) wafer.
- CC8: COM8 2x5pin (2.0mm) wafer.
- CC9: COM9 2x5pin (2.0mm) wafer.
- CC10: COM10 2x5pin (2.0mm) wafer.
- CDG1: DVI-D (down side) / VGA (Up side) DB15p connector.
- CG11: VGA port 2x5 pin (2.0mm) wafer.
- HDMI1: HDMI type A connector.
- DP1: Display-port connector. (The location share with HDMI1).
- eDP1: Embedded display-port 2x10pin (1.25mm) wafer.(TBD)
- LVDS1: LVDS 2x15 pin (1.25mm) connector.
- CPP1: Panel inverter power connector 1x5 pin (2.0mm) wafer.
- CT1: Touch screen device 2x5 pin (2.0mm) Wafer.

List of Connectors

- CIO1: DI port 0 ~ 3, DO port 0 ~ 3 2x5 pin (2.0mm) wafer.
- CIO2: DI port 4 ~ 7, DO port 4 ~ 7 2x5 pin (2.0mm) wafer.
- CIO3: DI port 8 ~11, DO port 8 ~ 11 2x5 pin (2.0mm) wafer(TBD)
- CIO4: DI port 12 ~15, DO port 12 ~ 15 2x5 pin (2.0mm) wafer(TBD).
- CKM1: KB/MS port 1x6 pin (1.25mm) wafer connector.
- CO1: I²C 4pin (1.25mm) wafer
- LPT1: LPT 2x13 pin (2.0mm) wafer.
- CPI1: DC 12V-in DIN external connector (4pin mini din connector)
- CPI11: DC 12V-in internal connector (2x2pin 4.2mm ATX connector).
- CPI13: DC-in 2x4 pin (2.0mm) wafer connector.
- CPO1: DC +5/+12V output connector (2.5mm) wafer.
- CPO2: DC +5/+12V output connector (2.5mm) wafer.
- CPO3: DC +5/+12V output 1x4 pin(2.0mm) wafer .
- CU5: USB port 2 4pin(1.25mm) wafer.
- CU6: USB port 3 4pin(1.25mm) wafer.
- CU7: USB port 7 4pin(1.25mm) wafer.
- CU8: USB port 8 4pin(1.25mm) wafer.
- CU9: USB port 9 4pin(1.25mm) wafer. (The port share with touch device)
- CU10: USB port 10 4pin(1.25mm) wafer. (The port share with MPCE1)
- CU11: USB port 11 4pin(1.25mm) wafer. (The port share with MPCE2)
- CU12: USB port 12 4pin(1.25mm) wafer.
- CU13: USB port 13 4pin(1.25mm) wafer.
- CU14: USB port 14 4pin(1.25mm) wafer.
- CUL1: USB port 3.0/2.0 3/4 and LAN1 RJ45 connector.
- CUL2: USB port 3.0/2.0 1/2 and LAN2 RJ45 connector.
- CFA1: CFAST card socket 7+17pin. (option)
- SATA1: SATA port 1 (Gen III) connectors 7pin.
- SATA2: SATA port 2 (Gen III) connectors 7pin.
- SATA3: SATA port 3 connectors 7pin.
- SATA4: SATA port 4 connectors 7pin.
- MPCE1: Mini card port 1 sockets 52pin.

List of Connectors

MPCE2: Mini card port 2 sockets 52pin.

SIM1: SIM port 1 card socket.

SIM2: SIM port 2 card socket.

CFP1: Front panel port 2x5 pin (2.54mm) wafer.

SWP1: Power On/Off switch wafer.

FAN1: CPU fan 1x3 pin (2.54mm) wafer.

FAN2: System fan 1x3 pin (2.54mm) wafer.

SODIM1/2: SO-DIM DDR3 1.5V DRAM Socket


3-2 FAN Connector

FAN1: CPU FAN connector (3pin 2.5mm wafer)

FAN2: System FAN connector (3pin 2.5mm wafer)

PIN NO.	Description
1	GND
2	+12V
3	FAN speed detect

Note: DC in +12V by switch to FAN power +12V, so DC in need stable +12V input

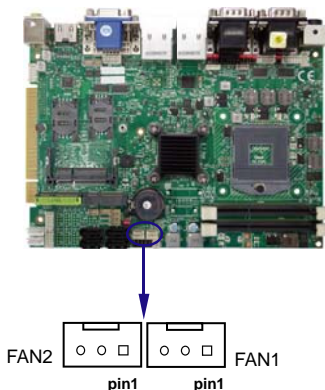


3-3 SATA Interface

- **SATA1, SATA2: The two SATA connectors (7pin wafer)**
SATA3, SATA4: The two SATA connectors (7pin wafer)

PIN NO.	Description
1	GND
2	DATA TX+
3	DATA TX-
4	GND
5	DATA RX-
6	DATA RX+
7	GND

- Note :
1. SATA1 and SATA2 support SATA 3.0 spec update 6Gb/sec .
 2. SATA3 and SATA4 support SATA 2.0 spec update 3Gb/sec .
 3. COP1 and COP2 provide SATA HDD power +12V,GND ,+5V

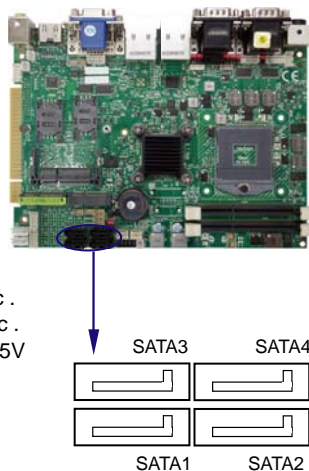

3-3-1 SSD use at SATA6 channel (TBD)





- Note :
1. On board SSD for OEM option
 2. The function share with mSATA

3-4 CFast card Reader (option)

CFA1: CFA Socket For SATA Interface (24pin CFA Socket)

PIN NO.	DESCRIPTION
S1	GND
S2	SATA TX+
S3	SATA TX-
S4	GND
S5	SATA RX-
S6	SATA RX+
S7	GND
PC1	GND(Card Detect In)
PC2	GND
PC3	NC
PC4	NC
PC5	NC
PC6	NC
PC7	GND
PC8	NC(LED Out)
PC9	NC(LED Out)
PC10	NC
PC11	NC
PC12	NC
PC13	+3.3V
PC14	+3.3V
PC15	GND
PC16	GND
PC17	GND(Card Detect Out)

Note : CFA1 use SATA port 5

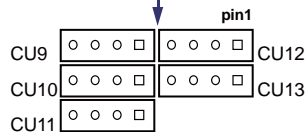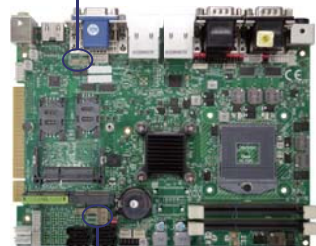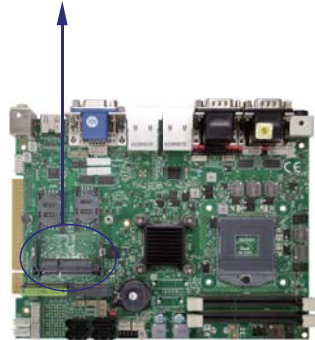

3-5 USB Port

• CU5/6/7/8/9/10/11/12/13: USB5/6/7/8/9/10/11/12/13 port (4pin 1.25mm Wafer)



PIN NO.	Description
1	+5V
2	USB DATA -
3	USB DATA +
4	GND

- Note:
1. CU5 and CU6 no connector
 2. The CU10 share with MPCE1 (no connector).
 3. The CU11 share with MPCE2 (no connector).
 4. The CU9 share with touch device (no connector).
 5. CU10, CU11 pin can support +12V by OEM

● **CU14: USB14 port (4pin 1.25mm Wafer)**

PIN NO.	Description
1	+5V or +3.3V
2	USB DATA -
3	USB DATA +
4	GND

Note: 1.PIN 1 Voltage select from JSU14

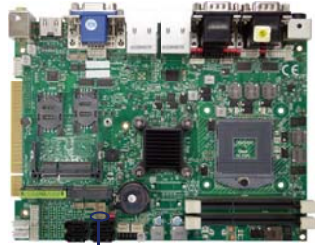

3-6 CUL1 / CUL2 LAN + USB connector


● **CUL1/CUL2 (Down side): USB3.0/2.0 Type A jack**

PIN NO.	Description	PIN NO.	Description
		1	USB3.0 TX+
1	+5V		
2	USB 2.0 D-	2	USB3.0 TX-
		3	GND
3	USB 2.0 D+	4	USB3.0 RX+
4	GND		
		5	USB3.0 RX-

- Note :
1. USB 3.0 and USB 2.0 combo Type A Jack
 2. CUL1 USB 3.0 port 3 and 4 , USB2.0 port 5 and 4
 3. CUL2 USB3.0 port 1 and 2, USB2.0 port 1 and 2
 4. USB3.0/2.0 Keyboard and Mouse use CUL1 can pitch Some OS install
And wake up Keyboard and Mouse can't work issue

● **CUL1 / CUL2 (Up side) :LAN Giga/100Mb RJ45 Jack**

PIN NO.	Description	PIN NO.	Description
1	TD0-/TX+	5	TD2-/NC
2	TD0+/TX-	6	TD2+/RX-
3	TD1-/RX+	7	TD3-/NC
4	TD1+/NC	8	TD3+/NC

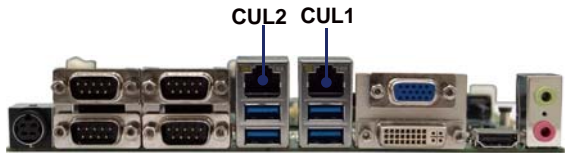

LAN LED


Intel 82574L / 82579 LM

Speed	10 Mbps			100 Mbps			1000 Mbps		
	Back Side		Fornt Side	Back Side		Fornt Side	Back Side		Fornt Side
	Link Led	ACT Led	ACT Led	Link Led	ACT Led	ACT Led	Link Led	ACT Led	ACT Led
LAN light		Orange	Orange	Green	Orange	Orange	Red	Orange	Orange

3-7 PS2 KB/MS

- CKM1: KB/MS port 1x6pin (1.25mm) Wafer


PIN NO.	1	2	3	4	5	6
Description	+5V	KB/DAT	KB/CLK	GND	MS/DAT	MS/CLK

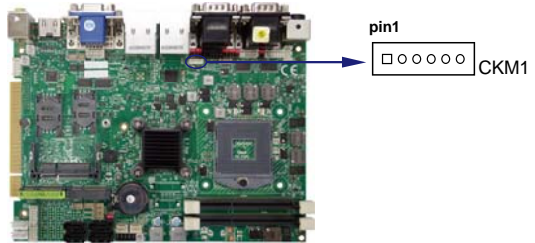

3-8 LPT interface (Line Print Terminal)

- LPT1: LPT 2x13 pin (2.0mm)wafe header.

PIN NO.	Description	PIN NO.	Description
1	STROBE#	2	AUTO FROM FEED#
3	DATA0	4	ERROR#
5	DATA1	6	INITIALIZE
7	DATA2	8	PRINTER SELECT LN#
9	DATA3	10	GND
11	DATA4	12	GND
13	DATA5	14	GND
15	DATA6	16	GND
17	DATA7	18	GND
19	ACKNOWLEDGE	20	GND
21	BUSY	22	GND
23	PARER EMPTY	24	NC
25	PRINTER SELECT	26	NC

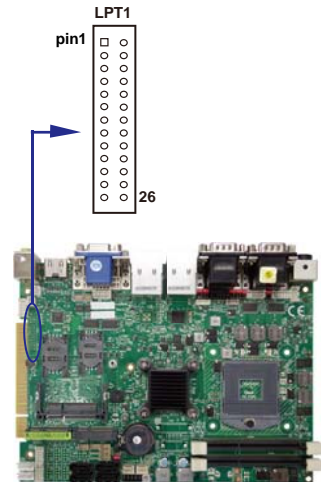

Note: BOM default haven't this function by OEM

3-9 DVI-D / VGA / HDMI / DP / LVDS Connector

● CDG1: DVI 12bit connector down side (DB Connector)


PIN NO.	Description	PIN NO.	Description	PIN NO.	Description
1	Data 2 -	9	Data 1 -	17	Data 0 -
2	Data 2 +	10	Data 1+	18	Data 0 +
3	GND	11	GND	19	GND
4	NC	12	NC	20	NC
5	NC	13	NC	21	NC
6	I ² C-CLK	14	+5V	22	GND
7	I ² C-DATA	15	GND	23	CLK+
8	NC	16	DVI-DETECT	24	CLK-

● CDG1: VGA DB15 Connector Up side (D-SUB 15PIN)

PIN NO.	Description	PIN NO.	Description	PIN NO.	Description
1	RED	6	GND	11	NC
2	GREEN	7	GND	12	DDC DATA
3	BULE	8	GND	13	H-SYNC
4	NC	9	NC	14	Y-SYNC
5	GND	10	GND	15	DDC CLOCK

● CG11: VGA 2x5pin 2.0mm wafer connector

PIN NO.	Description	PIN NO.	Description
1	BULE	2	GND
3	GND	4	DDC CLOCK
5	GREEN	6	V-SYNC
7	GND	8	H-SYNC
9	RED	10	DDC DATA



*Note: VGA signal CG11 share with CDG1 VGA



3-10 COM Port Connector

COM2 default support RS232/RS422/RS485 mode

COM1/3/4/5/6 default support RS232 mode

- **RS232 Mode connector (D-SUB 9pin)**

CC12: COM1 (up side) / COM2 (down side) port connector

CC34: COM3 (up side) / COM4 (down side) port connector

CC2: COM2 Single port connector. (The location share with CC12)

CC4: COM4 Single port connector. (The location share with CC34)

PIN NO.	Description	PIN NO.	Description
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI / VOLTAGE
5	GND		

Note: 1. Pin 9 RI and Voltage setting only for COM 1/2/3/4/5/6 ports

JVC1 for COM1, JVC2 for COM2 , JVC3 for COM3, JVC4 for COM4

2. COM2 default support RS232/RS422/RS485 by JSC2/21/22/23/24 selected.

- **RS485 Mode conector (D-SUB 9pin)**

CC12: COM1 (up side) / COM2 (down side) port connector

CC34: COM3 (up side) / COM4 (down side) port connector

CC2: COM2 Single port connector. (The location share with CC12)

CC4: COM4 Single port connector. (The location share with CC34)

PIN NO.	Description	PIN NO.	Description
1	RS485 TX-	6	NC
2	RS485 TX+	7	NC
3	NC	8	NC
4	NC	9	RI/VOLTAGE
5	GND		

Note: 1. COM2 default support RS232/RS422/RS485 by JSC2/21/22/23/24 selected.

2. COM1/3/4/5/6 Default RS232 , RS485 / RS422 by OEM bom

- **RS422Mode conector (D-SUB 9pin)**

CC12: COM1 (up side) / COM2 (down side) port connector

CC34: COM3 (up side) / COM4 (down side) port connector

CC2: COM2 Single port connector. (The location share with CC12)

CC4: COM4 Single port connector. (The location share with CC34)


PIN NO.	Description	PIN NO.	Description
1	RS422 TX-	6	NC
2	RS422 TX+	7	NC
3	RS422 RX+	8	NC
4	RS422 RX+	9	RI/VOLTAGE
5	GND		

Note: 1. COM2 default support RS232/RS422/RS485

by JSC2/21/22/23/24 selected.

2. COM1/3/4/5/6 Default RS232,

RS485 / RS422 by OEM bom

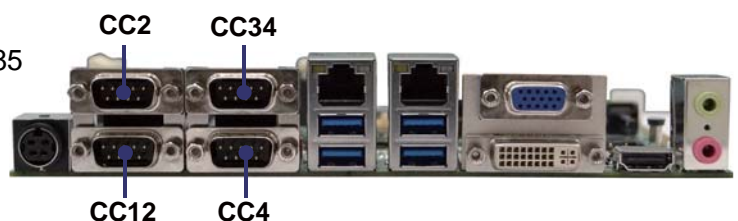


● **RS232 ports (2x5pin 2.0mm Wafer)**

CC11: COM1 CC21 : COM2
 CC31: COM3 CC41 : COM4
 CC5: COM5 CC6 : COM6

PIN NO.	Description	PIN NO.	Description
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI/ Voltage	10	NC

- Note: 1. CC11, CC21 share with CC12 connector for OEM
 2. CC31, CC41 share with CC34 connector for OEM
 3. The Pin 9 Voltage set by JVC1/2/3/4/5/6

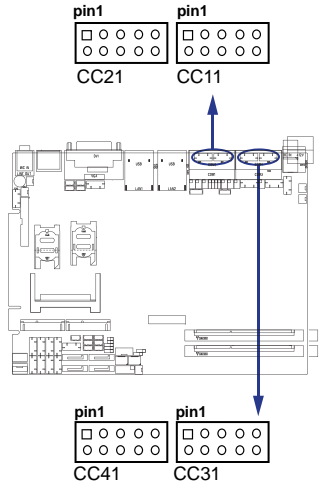


● **RS485 ports (2x5pin 2.0mm Wafer)**

CC11: COM1 CC21 : COM2
 CC31: COM3 CC41 : COM4
 CC5: COM5 CC6 : COM6

PIN NO.	Description	PIN NO.	Description
1	RS485 TX-	2	RS485 TX+
3	NC	4	NC
5	GND	6	NC
7	NC	8	NC
9	RI/ Voltage	10	NC

- Note: 1. CC11, CC21 share with CC12 connector for OEM
 2. CC31, CC41 share with CC34 connector for OEM
 3. The Pin 9 Voltage set by JVC1/2/3/4/5/6

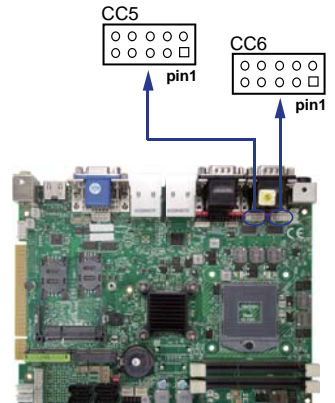

● **RS422 ports (2x5pin 2.0mm Wafer)**

CC11: COM1 CC21 : COM2
 CC31: COM3 CC41 : COM4
 CC5: COM5 CC6 : COM6

PIN NO.	Description	PIN NO.	Description
1	RS422 TX-	2	RS422 TX+
3	RS422 RX+	4	RS422 RX-
5	GND	6	NC
7	NC	8	NC
9	RI/ Voltage	10	NC

- Note: 1. CC11, CC21 share with CC12 connector for OEM
 2. CC31, CC41 share with CC34 connector for OEM
 3. The Pin 9 Voltage set by JVC1/2/3/4/5/6

● **CC13: COM1 RS232 port (5pin 1.25mm Wafer)**

PIN NO.	1	2	3	4	5
Description	+5V	GND	RTS	TXD	RXD


Note: All signals are RS232 level.

- COM ports from (PLX OXPcie954)
COM7/8/9/10 default support RS232 mode
COM7/8/9/10 is option for OEM.

● **RS232 ports (2x5pin 2.0mm Wafer)**

CC7: COM7 CC8 : COM8
CC9: COM9 CC10 : COM10


PIN NO.	Description	PIN NO.	Description
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	+5V

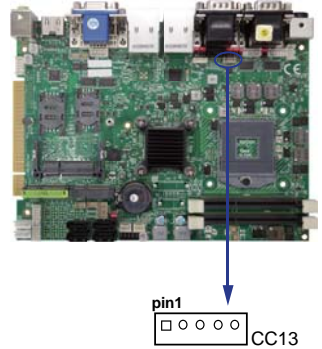

● **RS485 ports (2x5pin 2.0mm Wafer)**

CC7: COM7 CC8 : COM8
CC9: COM9 CC10 : COM10

PIN NO.	Description	PIN NO.	Description
1	RS485 TX-	2	RS485 TX+
3	NC	4	NC
5	GND	6	NC
7	NC	8	NC
9	NC	10	+5V

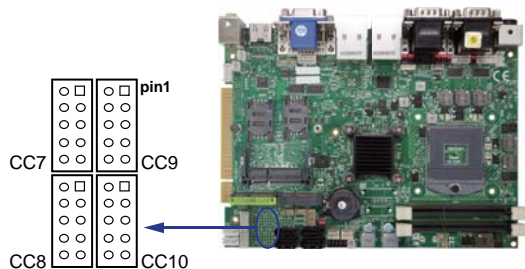

3-11 Audio Port Connector

The CI650A/C has an on-board AC'97 3D sound interface. There are the connectors of LINE OUT, MIC-IN connectors. The MIC-IN Jack header are for audio sound input. The LINE-OUT connector is a 4-pin Jack for audio sound output.

● **CA12: Up side Line out (3.5mm phone jack)**


PIN NO.	1	2	3	4	5
Description	GND	Line OUT-L	NC	NC	Line OUT-R

● **CA12: Down side Mic in (3.5mm phone jack)**

PIN NO.	1	2	3	4	5
Description	GND	Min-IN	NC	NC	Min-IN

● **CA3: Line-out/Line-in/Mic-in 2x4 pin (2.0mm) Header**

PIN NO.	Description	PIN NO.	Description
1	Line-out-R	2	MIC-IN
3	Line-in-R	4	GND
5	GND	6	GND
7	Line-in-L	8	NC
9	Line-out-L	10	MIC-IN




3-12 Audio Amplifier class AB Two channel 2W/ch

● **CAR1: Audio Amplifier Line Out Right (2pin 2.0mm wafer)**

PIN NO.	Description
1	LINE-OUT_R+
2	LINE-OUT_R-

● **CAL1: Audio Amplifier Line Out Left(2pin 2.0mm wafer)**

PIN NO.	Description
1	LINE-OUT_L+
2	LINE-OUT_L-

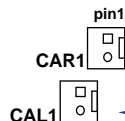


3-13 SPDIF Digital Photo out connector

- **SPDIF1: SPDIF audio output connector.**

PIN NO.	1	2	3
Description	GND	+5V	Audio DATA

Note: Share CA12 location, by OEM

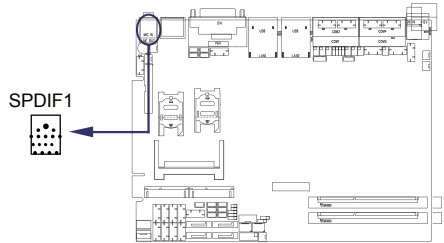

3-14 Digital Input / Output / Watch Dog Time

- **CIO1 DIO 0 ~ 3 (2x5pin 2.0mm wafer)**



PIN NO.	Description	PIN NO.	Description
1	DI-0	2	DO-3
3	DI-1	4	DO-2
5	DI-2	6	DO-1
7	DI-3	8	DO-0
9	GND	10	+5V

Note: 1. The system default 8DI and 8DO
 2. DI pin default pull up 10KΩ to +5V
 3. If use need isolate circuit to control external device
 4. F75111N-1 I²C bus address 0 x 9c

- **CIO2 DIO 4 ~ 7 (2x5pin 2.0mm wafer)**

PIN NO.	Description	PIN NO.	Description
1	DI-4	2	DO-7
3	DI-5	4	DO-6
5	DI-6	6	DO-5
7	DI-7	8	DO-4
9	GND	10	+5V

Note: 1. The system default 8DI and 8DO
 2. DI pin default pull up 10KΩ to +5V
 3. If use need isolate circuit to control external device
 4. F75111N-1 I²C bus address 0 x 9c

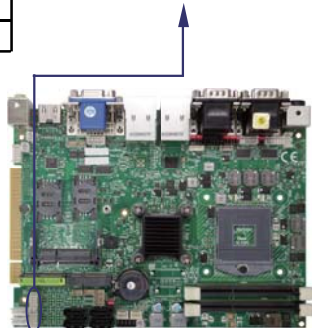

● CIO3 DIO 8 ~ 11 (2x5pin 2.0mm wafer) (TBD)



PIN NO.	Description	PIN NO.	Description
1	DI-8	2	DO-11
3	DI-9	4	DO-10
5	DI-10	6	DO-9
7	DI-11	8	DO-8
9	GND	10	+5V

- Note: 1. CIO3 is option function
 2. DI pin default pull up 10KΩ to +5V
 3. If use need isolate circuit to control external device
 4. F75111N-2 I²C bus address 0 x 6e

● CIO4 DIO 12 ~ 15 (2x5pin 2.0mm wafer) (TBD)

PIN NO.	Description	PIN NO.	Description
1	DI-12	2	DO-15
3	DI-13	4	DO-14
5	DI-14	6	DO-13
7	DI-15	8	DO-12
9	GND	10	+5V

- Note: 1. CIO4 is option function
 2. DI pin default pull up 10KΩ to +5V
 3. If use need isolate circuit to control external device
 4. F75111N-2 I²C bus address 0 x 6e

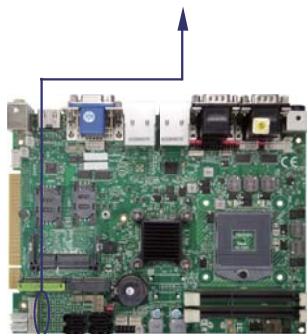

For F75111N I²C watch dog timer device:

DC spec:

Input low Voltage (VIL):+0.8 Max,

Input High Voltage (VIH): +2V Min

Output low Current (IOL):10mA (Min) VOL=0.4V

Output High Current (IOH):-10mA (Min) VOH=2.4V

Watch Dog Time value 0~255 sec

The system will be issued reset.

When WDT is enable the hardware start down counter to zero.

The reset timer have 10~20% tolerance upon the Temperature.

Note: If want to SDK support. Please contact to sales window.

3-14-1 IO Device:F75111 under DOS

The Sample code source you can download from


Source file: F75111_Dos_Src.rar http://tprd.info/lexwiki/index.php/IO_Device:F75111_under_DOS

Binary file: F75111_Dos_Bin.rar

USERNAME & PASSWORD: sf

How to use this Demo Application

- 1.Boot Ms-Dos Operating System
- 2.execute "75WDT.EXE" binary file
- 3.Input 1 to Enable WDT timer or input 0 to Disable it.
- 4.input numbers of second for chip countdown and Reset Computer

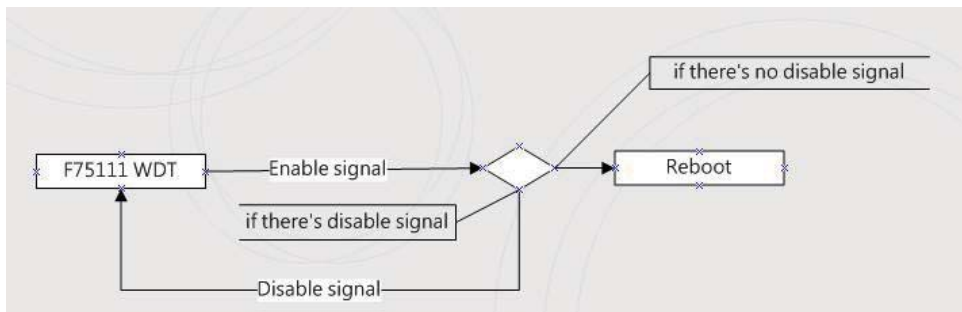

Introduction

Enable Watch Dog Timer

```
Write2CByte(I2CADDR, CONFIG, 0x03);//Set Watch Dog Timer function
Write2CByte(I2CADDR, WDT_TIMER, timer);//Set Watch Dog Timer range from 0-255.
Write2CByte(I2CADDR, WDT_TIMER_CTL, 0x73);//Enable Watch Dog Timer in second and pulse mode
```

Disable Watch Dog Timer

```
Write2CByte(I2CADDR, WDT_TIMER_CTL, 0x00);
```

Time Pause for mini seconds

```
void pause(int time)
{
    asm mov ah,0h;           //Ah = 00 Read System Time Counter
    asm int 1ah;           //read time from Time Counter and store it in DX register
    asm add dx,time;
    asm mov bx,dx;
    label:
    asm int 1ah;
    asm cmp bx,dx;
    asm jne label;
}
```

3-14-2 IO Device: F75111 under Windows


The Sample code source you can download from



Source file: F75111_DIOSrc.rar http://tprd.info/lexwiki/index.php/IO_Device:F75111


Binary file: F75111_DemoBin.rar

USERNAME & PASSWORD: sf

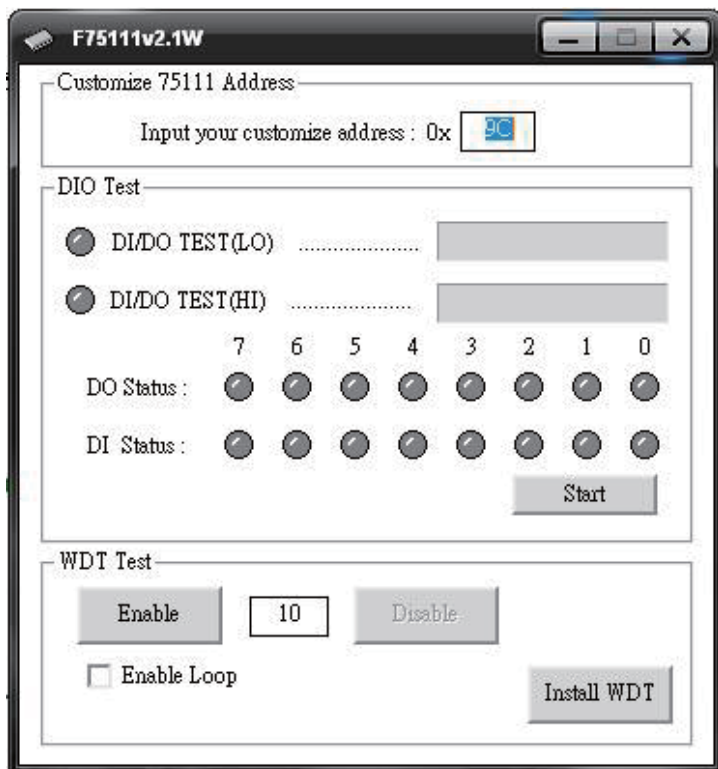How to use this Demo Application



1. Press the "Start" button to test DIO function
2. Press the "Enable" button to test WDT function
3. Press the "Disable" button to disable WDT
4. Check the "Enable Loop" box and press "Enable" to do WDT loop test
5. Press "Install WDT" to set the system to autorun this application when booting, press again to remove this application when booting.
6. If WDT enable, system icon will be  . if disable, system icon will be 

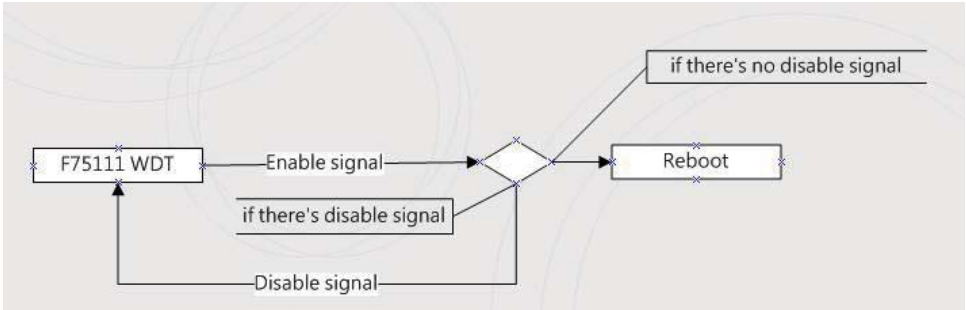

p.s.
 f75111 send "F75111_SetWDTEnable(BYTE byteTimer)" including a parameter "timer",
 if there's no disable signal (F75111_SetWDTDisable()) to stop it before timer countdown to 0, System will reboot.
 if there's disable signal received, resent Enable WDT signal, for a loop to prevent from reboot

Introduction

Initial Internal F75111 port address (0x9c)

define GPIO1X, GPIO2X, GPIO3X to input or output
 and Enable WDT function pin

Set F75111 DI/DO (sample code as below Get Input value/Set output value)

DO: InterDigitalOutput(BYTE byteValue)
 DI: InterDigitalInput()

Enable/Disable WDT

Enable : F75111_SetWDTEnable (BYTE byteTimer)
 Disable: F75111_SetWDTDisable ()

PULSE mode

Sample to setting GP33, 32, 31, 30 output 1mS low pulse signal.

```

{
  this->Write_Byte(F75111_INTERNAL_ADDR, GPIO3X_PULSE_CONTROL,      0x00); //This is setting low pulse output
  this->Write_Byte(F75111_INTERNAL_ADDR, GPIO3X_PULSE_WIDTH_CONTROL, 0x01); //This selects the pulse width to 1mS
  this->Write_Byte(F75111_INTERNAL_ADDR, GPIO3X_CONTROL_MODE,       0x0F); //This is setting the GP33, 32, 31, 30 to output function.
  this->Write_Byte(F75111_INTERNAL_ADDR, GPIO3X_Output_Data ,      0x0F); //This is setting the GP33, 32, 31, 30 output data.
}
  
```

Initial internal F75111

```

void F75111::InitInternalF75111()
{
  this->Write_Byte(F75111_INTERNAL_ADDR,GPIO1X_CONTROL_MODE ,0x00); //set GPIO1X to Input function
  this->Write_Byte(F75111_INTERNAL_ADDR,GPIO3X_CONTROL_MODE ,0x00); //set GPIO3X to Input function
  this->Write_Byte(F75111_INTERNAL_ADDR,GPIO2X_CONTROL_MODE ,0xFF); //set GPIO2X to Output function

  this->Write_Byte(F75111_INTERNAL_ADDR,F75111_CONFIGURATION, 0x03); //Enable WDT OUT function
}
  
```

Set output value

```
void F75111::InterDigitalOutput(BYTE byteValue)
{
    BYTE byteData = 0;
    byteData = (byteData & 0x01 )? byteValue + 0x01 : byteValue;
    byteData = (byteData & 0x02 )? byteValue + 0x02 : byteValue;
    byteData = (byteData & 0x04 )? byteValue + 0x04 : byteValue;
    byteData = (byteData & 0x08 )? byteValue + 0x08 : byteValue;
    byteData = (byteData & 0x10 )? byteValue + 0x10 : byteValue;
    byteData = (byteData & 0x20 )? byteValue + 0x20 : byteValue;
    byteData = (byteData & 0x40 )? byteValue + 0x40 : byteValue;
    byteData = (byteData & 0x80 )? byteValue + 0x80 : byteValue;           // get value bit by bit

    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO2X_OUTPUT_DATA,byteData); // write byteData value via GPIO2X output pin
}
}
```

Get Input value

```
BYTE F75111::InterDigitalInput()
{
    BYTE byteGPIO1X = 0;
    BYTE byteGPIO3X = 0;
    BYTE byteData   = 0;

    this->Read_Byte(F75111_INTERNAL_ADDR,GPIO1X_INPUT_DATA,&byteGPIO1X); // Get value from GPIO1X
    this->Read_Byte(F75111_INTERNAL_ADDR,GPIO3X_INPUT_DATA,&byteGPIO3X); // Get value from GPIO3X

    byteGPIO1X = byteGPIO1X & 0xF0;           // Mask unuseful value
    byteGPIO3X = byteGPIO3X & 0x0F;           // Mask unuseful value

    byteData = ( byteGPIO1X & 0x01 )? byteData + 0x01 : byteData;
    byteData = ( byteGPIO1X & 0x80 )? byteData + 0x02 : byteData;
    byteData = ( byteGPIO1X & 0x40 )? byteData + 0x04 : byteData;
    byteData = ( byteGPIO3X & 0x01 )? byteData + 0x08 : byteData;

    byteData = ( byteGPIO3X & 0x02 )? byteData + 0x10 : byteData;
    byteData = ( byteGPIO3X & 0x04 )? byteData + 0x20 : byteData;
    byteData = ( byteGPIO3X & 0x08 )? byteData + 0x40 : byteData;
    byteData = ( byteGPIO1X & 0x20 )? byteData + 0x80 : byteData;           // Get correct DI value from GPIO1X & GPIO3X

    return byteData;
}
}
```

Enable WatchDog

```
void F75111_SetWDTEnable (BYTE byteTimer)
{
    WriteByte(F75111_INTERNAL_ADDR,WDT_TIMER_RANGE ,byteTimer);           // set WatchDog range and timer
    WriteByte(F75111_INTERNAL_ADDR,WDT_CONFIGURATION,WDT_TIMEOUT_FLAG | WDT_ENABLE | WDT_PULSE | WDT_PSWIDTH_100MS);
                                                                           // Enable WatchDog, Setting WatchDog configure
}
}
```

Disable WatchDog

```
void F75111_SetWDTDisable ()
{
    WriteByte(F75111_INTERNAL_ADDR,WDT_CONFIGURATION,0x00);           // Disable WatchDog
}
```

3-14-3 IO Device: F75111 VB6 under Windows

The Sample code source you can download from

Source file: 75111_VB_v10.rar http://tprd.info/lexwiki/index.php/IO_Device:F75111_VB6

Binary file: 75111_VB_Src.rar

USERNAME & PASSWORD: sf

How to use this Demo Application

75111_DEMO VB v1.0

Please key-in the timer by sec !!

A **B**

Enable WDT Disable WDT

Please key-in the DO Value by hex!! exp:0xFF = FF

Set DO Value **C**

Push the Button will show the DI 1X_3X Value !!

D

Check DI Value 1X Value

2X Value

A Function - Enable WDT timer ,Key-in the value by seconds then system will reboot after value which you key-in in left text box !!

B Function - Disable WDT timer ,Push down the button then WDT timer value will be clear !!

C Function - Set DO Value ,Key-in the DO value by hex then push the button !!

D Function - Check DI Value ,The right side two text box will display DI 1X & 2X Value when you push down the button!!

SDK Function Introduction

Function EnableWDT

Function EnableWDT(timer As Integer)

```
Call Writel2CByte(&H3, &H3)
Call Writel2CByte(&H37, timer)
Call Writel2CByte(&H36, &H73)
```

End Function

Function DisableWDT

Function DisableWDT()

```
Call Writel2CByte(&H36, &H0)
```

End Function

Function SetDOValue

Function SetDOValue(dovalue As Integer)

```
Call Writel2CByte(&H23, &H0)
Call Writel2CByte(&H20, &HFF)
Call Writel2CByte(&H2B, &HFF)
Call Writel2CByte(&H21, dovalue)
```

End Function

Function CheckDIValue

Function CheckDIValue()

```
Dim GPIO1X As Integer
Dim GPIO3X As Integer
Dim DI1Xhex As String
Dim DI3Xhex As String
```

```
Call Readl2CByte(&H12, GPIO1X)
Call Readl2CByte(&H42, GPIO3X)
```

```
DI1Xhex = Hex(GPIO1X)
DI3Xhex = Hex(GPIO3X)
```

```
Text3.Text = "0x" + DI1Xhex
Text4.Text = "0x" + DI3Xhex
```

End Function

3-14-4 IO Device: F75111 under linux

The Sample code source you can download from

Source file: [F75111v2.0L.tar.gz](http://tprd.info/lexwiki/index.php/IO_Device:F75111_under_linux) http://tprd.info/lexwiki/index.php/IO_Device:F75111_under_linux

Binary file: [F75111v2.0LBin.tar.gz](#)

USERNAME & PASSWORD: sf

How to compile source code

1. Compile source code with Code::Blocks

download and install the Code::Block with command "apt-get install codeblocks"

Open an exist project(F75111.cbp) in Code::Blocks, click the compile button

(add an option 'pkg-config --libs gtk+-2.0 gthread-2.0' in "Project->Build Option->Linker Setting->Other linker option")


2. Compile source code with "make"

1.cd F75111


1.make

1.src/f75111 // execute the binary file

How to use this Demo Application

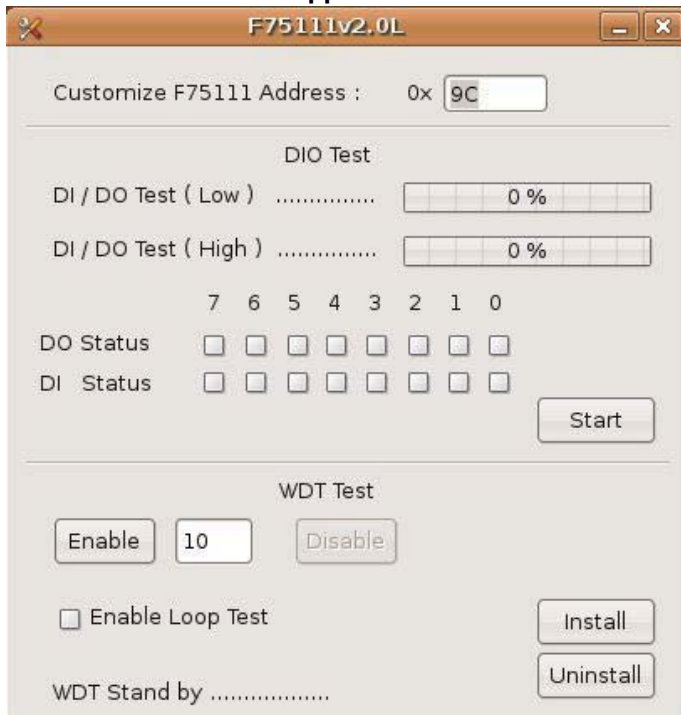

1. Press the "Start" button to test DIO function
2. Press the "Enable" button to test WDT function
3. Press the "Disable" button to disable WDT
4. Check the "Enable Loop" box and press "Enable" to do WDT loop test
5. Press "Install" to set the system to autorun this application when booting, press "Uninstall" to remove this application when booting.
6. If WDT enable, system icon will be blinking.

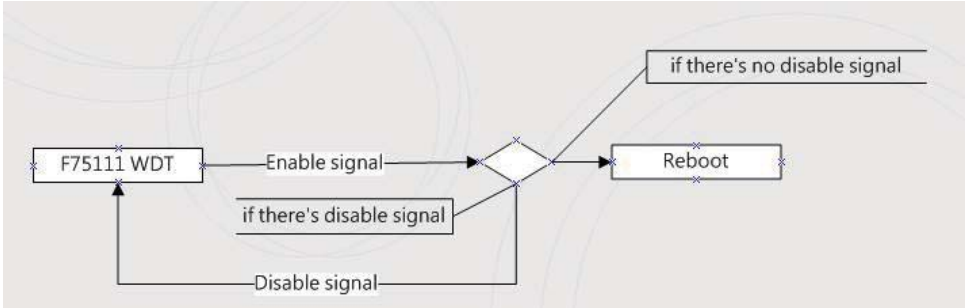

p.s.
 f75111 send "F75111_SetWDTEnable(BYTE byteTimer)" including a parameter "timer",
 if there's no disable signal (F75111_SetWDTDisable()) to stop it before timer countdown to 0, System will reboot.
 if there's disable signal received, resent Enable WDT signal, for a loop to prevent from reboot

Introduction

IO function In file SMBus.c

```

void SMBusIoWrite(BYTE byteOffset,BYTE byteData)
{
    outb( byteData , m_SMBusMapIoAddr + byteOffset);
}

BYTE SMBusIoRead(BYTE byteOffset)
{
    DWORD dwAddrVal;

    dwAddrVal = inb(m_SMBusMapIoAddr + byteOffset);
    return (BYTE)(dwAddrVal & 0x0FF);
}
  
```

Initial internal F75111

```

void F75111::InitInternalF75111()
{
    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO1X_CONTROL_MODE ,0x00);    //set GPIO1X to Input function
    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO3X_CONTROL_MODE ,0x00);    //set GPIO3X to Input function
    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO2X_CONTROL_MODE ,0xFF);    //set GPIO2X to Output function

    this->Write_Byte(F75111_INTERNAL_ADDR,F75111_CONFIGURATION, 0x03);    //Enable WDT OUT function
}
  
```

Set output value

```
void F75111::InterDigitalOutput(BYTE byteValue)
{
    BYTE byteData = 0;
    byteData = (byteData & 0x01 )? byteValue + 0x01 : byteValue;
    byteData = (byteData & 0x02 )? byteValue + 0x02 : byteValue;
    byteData = (byteData & 0x04 )? byteValue + 0x04 : byteValue;
    byteData = (byteData & 0x80 )? byteValue + 0x08 : byteValue;
    byteData = (byteData & 0x40 )? byteValue + 0x10 : byteValue;
    byteData = (byteData & 0x20 )? byteValue + 0x20 : byteValue;
    byteData = (byteData & 0x10 )? byteValue + 0x40 : byteValue;
    byteData = (byteData & 0x08 )? byteValue + 0x80 : byteValue;           // get value bit by bit

    this->Write_Byte(F75111_INTERNAL_ADDR,GPIO2X_OUTPUT_DATA,byteData); // write byteData value via GPIO2X output pin
}
}
```

Get Input value

```
BYTE F75111::InterDigitalInput()
{
    BYTE byteGPIO1X = 0;
    BYTE byteGPIO3X = 0;
    BYTE byteData = 0;

    this->Read_Byte(F75111_INTERNAL_ADDR,GPIO1X_INPUT_DATA,&byteGPIO1X); // Get value from GPIO1X
    this->Read_Byte(F75111_INTERNAL_ADDR,GPIO3X_INPUT_DATA,&byteGPIO3X); // Get value from GPIO3X

    byteGPIO1X = byteGPIO1X & 0xF0;           // Mask unuseful value
    byteGPIO3X = byteGPIO3X & 0x0F;           // Mask unuseful value

    byteData = ( byteGPIO1X & 0x10 )? byteData + 0x01 : byteData;
    byteData = ( byteGPIO1X & 0x80 )? byteData + 0x02 : byteData;
    byteData = ( byteGPIO1X & 0x40 )? byteData + 0x04 : byteData;
    byteData = ( byteGPIO3X & 0x01 )? byteData + 0x08 : byteData;

    byteData = ( byteGPIO3X & 0x02 )? byteData + 0x10 : byteData;
    byteData = ( byteGPIO3X & 0x04 )? byteData + 0x20 : byteData;
    byteData = ( byteGPIO3X & 0x08 )? byteData + 0x40 : byteData;
    byteData = ( byteGPIO1X & 0x20 )? byteData + 0x80 : byteData;           // Get correct DI value from GPIO1X & GPIO3X

    return byteData;
}
}
```

Enable WatchDog

```
void F75111_SetWDTEnable (BYTE byteTimer)
{
    WriteByte(F75111_INTERNAL_ADDR,WDT_TIMER_RANGE ,byteTimer);           // set WatchDog range and timer
    WriteByte(F75111_INTERNAL_ADDR,WDT_CONFIGURATION,WDT_TIMEOUT_FLAG | WDT_ENABLE | WDT_PULSE | WDT_PSWIDTH_100MS);
                                                                           // Enable WatchDog, Setting WatchDog configure
}
```


Disable WatchDog

```
void F75111_SetWDTDisable ()
{
    WriteByte(F75111_INTERNAL_ADDR,WDT_CONFIGURATION,0x00);             // Disable WatchDog
}
```

3-15 LVDS Interface Connector

● LVDS1: 18/24bits LVDS interface (2x15pin 1.25mm wafer)

PIN NO.	Description	PIN NO.	Description
1	PWM dimming	2	+5V
3	+LCD(5V or 3.3V)	4	+LCD(5V or 3.3V)
5	Channel-1-DATA3+	6	Channel-0-DATA3+
7	Channel-1-DATA3-	8	Channel-0-DATA3-
9	Channel-0-DATA2+	10	Channel-0-CLK+
11	Channel-0-DATA2-	12	Channel-0-CLK-
13	GND	14	GND
15	Channel-0-DATA1+	16	Channel-0-DATA0+
17	Channel-0-DATA1-	18	Channel-0-DATA0-
19	GND	20	GND
21	+LCD(5V or 3.3V)	22	+LCD(5V or 3.3V)
23	Channel-1-DATA2+	24	Channel-1-CLK+
25	Channel-1-DATA2-	26	Channel-1-CLK-
27	Channel-1-DATA1+	28	Channel-1-DATA0+
29	Channel-1-DATA1-	30	Channel-1-DATA0-

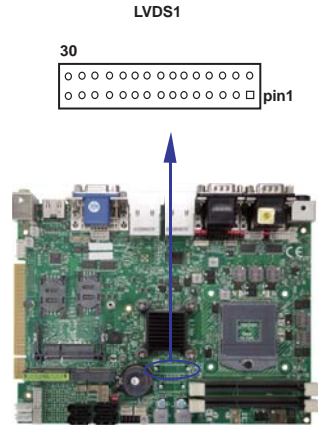


- Note: 1. JVL1: LVDS panel +5V/+3.3V Voltage select
 2. LVDS1 PIN 1 for panel backlight active, default Hi or Low by JSD1 jumper setting.
 3. Pin 1 back light dimming control .provided 200Hz / 275Hz / 380Hz / 20KHz /25KHz and adjust PWM duty cycle by software program .

3-16 Panel Power Connector

● CPP1: Panel Inverter power (5pin 2.0mm wafer)

PIN NO.	Description
1	+12V or +5V
2	GND
3	PWM dimming
4	ENBKL(3.3V)
5	ENBKL(5V)

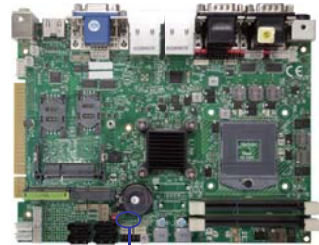

- Note: 1. JVP1 Inverter Voltage select
 2. CPP1 PIN 3 and LVDS1 PIN1 is same signal. Default active setup by JSD1
 3. Pin 3 back light dimming control. provided 200Hz / 275Hz / 380Hz / 20KHz /25KHz and adjust PWM duty cycle by software program.

3-17 Touch screen device

CT1: Touch screen (2x5 pin 2.0mm wafer)

Default use USB interface, can change COM interface By OEM BOM

● For 8- wire type pin define

PIN NO.	Description	PIN NO.	Description
1	Bottom	2	Bottom Sense
3	Top Sense	4	Top
5	Right	6	Right Sense
7	Left	8	Left Sense
9	GND	10	KEY

Note:1. For eight wire type cable Pin 3 and Pin4 need short.
2. Touch controller use USB port 9

● For 4- wire type pin define


PIN NO.	Description	PIN NO.	Description
1	Bottom	2	N/A
3	N/A	4	Top
5	Right	6	N/A
7	Left	8	N/A
9	GND	10	KEY

Note:1. For four wire type cable Pin 3 and Pin4 need short.
2. Touch controller use USB port 9

● For 5- wire type pin define

PIN NO.	Description	PIN NO.	Description
1	UR(H)	2	N/A
3	Sense	4	UL(Y)
5	LR(X)	6	N/A
7	LL(L)	8	N/A
9	GND	10	KEY

Note:1. Touch controller use USB port 9



3-18 DC 12V-IN external Connector

- **CPI1: DC 12V-IN external Connector (4pin mini din connector)**

PIN NO.	Description
1,2	+12V DC-IN
3,4	GND

Note: DC in from adapter plug in




- **CPI11: DC 12V-IN Internal Connector (2x2pin 4.2mm ATX connector)**

The location share with CPI1

PIN NO.	Description
1,2	+12V DC-IN
3,4	GND


Note: This connector share with CPI1 for OEM

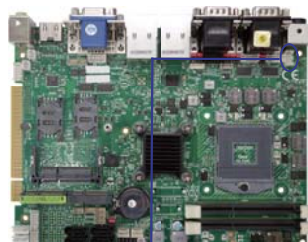

- **CPI13: DC 12V-IN Internal Connector (4pin 2.0mm wafer)**

PIN NO.	Description	PIN NO.	Description
1	+12V DC-IN	2	+12V DC-IN
3	+12V DC-IN	4	+12V DC-IN
5	NC	6	GND
7	GND	8	GND

Note: DC in from adapter plug in



3-19 DC +5/+12V output connector

- **CPO1/CPO2: +12V/+5V DC voltage output (4pin 2.54mm Wafer)**


PIN NO.	Description
1	+5V
2	GND
3	GND
4	+12V *

*Note: DC in +12V by switch to DC-out voltage +12V, so DC in need stable +12V input



- **CPO3: +12V/+5V DC voltage output (4pin 2.0mm Wafer)**

PIN NO.	Description
1	+5V
2	GND
3	GND
4	+12V *

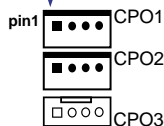

*Note: 1. DC in +12V by switch to DC-out voltage +12V, so DC in need stable +12V input
2. CPO3 connector share with CPO2 connector .

3-20 I²C Bus Interface

- CO1: I²C(SM) bus connector (4 pin 1.25mm wafer)

PIN NO.	Description
1	+3.3V
2	GND
3	SMB_CLK
4	SMB_DATA



3-21 HDMI interface

- HDMI1: HDMI1 type A connector

PIN NO.	Description	PIN NO.	Description	PIN NO.	Description	PIN NO.	Description
1	TMDS2(p)	2	GND	3	TMDS2(n)	4	TMDS1(p)
5	GND	6	TMDS1(n)	7	TMDS0(p)	8	GND
9	TMDS0(n)	10	TMDS CLK(p)	11	GND	12	TMDSCLK(n)
13	NC	14	NC	15	DDC CLK	16	DDC DATA
17	GND	18	+5V	19	HPD		

- DP1: Display-port connector


PIN NO.	Description	PIN NO.	Description	PIN NO.	Description	PIN NO.	Description
1	LANE0 (p)	2	GND	3	LANE0 (n)	4	LANE1 (p)
5	GND	6	LANE1 (n)	7	LANE2 (p)	8	GND
9	LANE2 (n)	10	LANE3 (p)	11	GND	12	LANE3 (n)
13	NC	14	GND	15	AUX (p)	16	GND
17	AUX (n)	18	HPD	19	GND	20	+3.3V

*Note: 1.This port location share with HDMI1 connector
 2. If use DP1 need change BIOS code.

- eDP1:Embedded display-port 2x10pin (1.25mm) wafer.(TBD)

PIN NO.	Description	PIN NO.	Description
1	eDP-TX0-	2	+12V or +5V
3	eDP-TX0+	4	+12V or +5V
5	eDP-TX1-	6	GND
7	eDP-TX1+	8	GND
9	eDP-TX2-	10	GND
11	eDP-TX2+	12	GND
13	eDP-TX3-	14	LCD Power
15	eDP-TX3+	16	LCD Power
17	eDP-AUX+	18	LCD Power
19	eDP-AUX-	20	eDP-HPD


Note: 1. All signal from CPU eDP interface .
 2. LCD Power pin from JVL1 LCD panel +5V/+3.3V Voltage select
 3. Backlight Power refer CPP1
 4. This function is for OEM panel only.

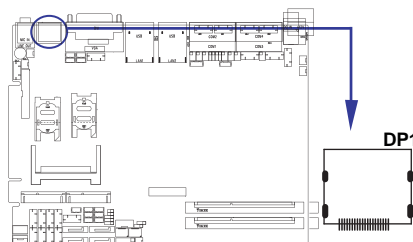

3-22 Mini card / SIM card

- **MPCE1/MPCE2: Support USB and PCIe by one Interface (Mini card socket 52pin)**

PIN NO.	Description	PIN NO.	Description
1	NC	2	+3.3V
3	NC	4	GND
5	NC	6	+1.5V
7	NC	8	SIM Power
9	GND	10	SIM Data
11	PCIe-CLK-	12	SIM CLK
13	PCIe-CLK+	14	SIM Reset
15	GND	16	SIM RFU
KEY	KEY	KEY	KEY
17	NC	18	GND
19	NC	20	NC
21	GND	22	RST-
23	PCIe-RX-/mSATA-RX+	24	+3.3V
25	PCIe-RX+/mSATA-RX-	26	GND
27	GND	28	+1.5V
29	GND	30	SMB-CLK
31	PCIe-TX-/mSATA-TX-	32	SMB-DATA
33	PCIe-TX+/mSATA-TX+	34	GND
35	GND	36	USB-DATA-
37	GND	38	USB-DATA+
39	+3.3V	40	GND
41	+3.3V	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	+1.5V
49	NC	50	GND
51	mSATA-Detect	52	+3.3V


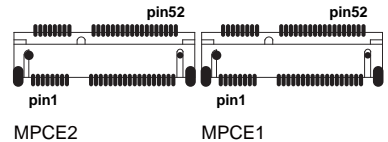


- Note:
1. MPCE 1 used USB port 10, MPCE2 used USB port 11.
 2. MPCE1 Pin 8, 10,12,14,16 for SIM1 card reader use.
 3. MPCE2 Pin 8, 10,12,14,16 for SIM2 card reader use.
 4. Just only MPCE1 pin23, 25, 31, 33 supported mSATA device and PCIe device alternatively.
 5. Pin51 mSATA / PCIe auto detect function
 6. mSATA use system SATA port 6 , the port share with on board NANADrive
This port only choice one device can't work at same time.

3-23 Front Panel connector

- CFP1 Front panel connector (2x5pin 2.54mm wafer)

PIN NO.	Description	PIN NO.	Description
1	Power button pin	2	Power button GND
3	Reset pin	4	Reset GND
5	Power LED -	6	Power LED +
7	HDD LED-	8	HDD LED+
9	LAN LED-	10	LAN LED+

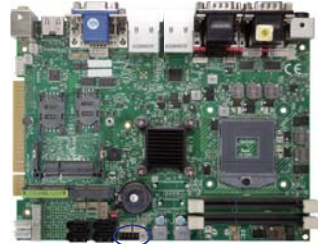

- SWP1 PB connector (2pin 2.0mm wafer)



PIN NO.	Description
1	Power button pin
2	Power button GND

3-24 SIM card

- SIM1, SIM2 : SIM card socket pin define is follow ISO 7816-2 smart card standard.


PIN NO.	Description	PIN NO.	Description
1	Vcc	5	GND
2	RST	6	Vpp
3	CLK	7	DATA
4	RUF	8	RUF

Note: 1. MPCE1 Pin 8, 10,12,14,16 for SIM1 card reader use.
 2. MPCE2 Pin 8, 10,12,14,16 for SIM2 card reader use.

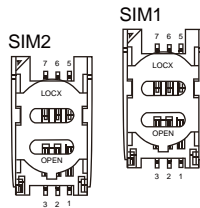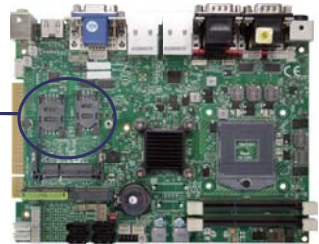

3-25 SODIMM socket

- SODIM1/2: SO-DIM DDR3 1.5V DRAM Socket

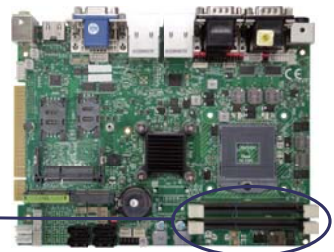

3-26 PCI Gold Finger PIN Define

PIN NO.	Description	PIN NO.	Description
A1	NC	A32	NC
A2	+12V	A33	+3.3V
A3	+5V	A34	NC
A4	+5V	A35	GND
A5	+5V	A36	NC
A6	NC	A37	GND
A7	NC	A38	NC
A8	+5V	A39	+3.3V
A9	BUF_PLT_RST#	A40	SMB_CLK
A10	+5V	A41	SMB_DATA
A11	PCIE_RXP_A	A42	GND
A12	GND	A43	NC
A13	GND	A44	NC
A14	+3.3A	A45	+3.3V
A15	NC	A46	NC
A16	+5V	A47	NC
A17	NC	A48	GND
A18	GND	A49	NC
A19	P_PME#	A52	NC
A20	NC	A53	+3.3V
A21	+3.3V	A54	NC
A22	CLK_PCIE_BP	A55	NC
A23	CLK_PCIE_BN	A56	GND
A24	GND	A57	NC
A25	NC	A58	NC
A26	NC	A59	+5V
A27	+3.3V	A60	+5V
A28	PCIE_RXP_B	A61	+5V
A29	PCIE_RXN_B	A62	+5V
A30	GND		
A31	NC		

PIN NO.	Description	PIN NO.	Description
B1	NC	B32	NC
B2	NC	B33	NC
B3	GND	B34	GND
B4	NC	B35	NC
B5	+5V	B36	+3.3V
B6	+5V	B37	NC
B7	NC	B38	GND
B8	NC	B39	NC
B9	CLK_PCIE_AP	B40	NC
B10	CLK_PCIE_AN	B41	+3.3V
B11	PCIE_RXN_A	B42	NC
B12	PCIE_TXN_A	B43	+3.3V
B13	PCIE_TXP_A	B44	NC
B14	NC	B45	NC
B15	GND	B46	GND
B16	NC	B47	NC
B17	GND	B48	NC
B18	NC	B49	GND
B19	+5V	B52	NC
B20	NC	B53	NC
B21	NC	B54	+3.3V
B22	GND	B55	NC
B23	PCIE_TXN_B	B56	NC
B24	PCIE_TXP_B	B57	GND
B25	+3.3V	B58	NC
B26	NC	B59	+5V
B27	NC	B60	+5V
B28	GND	B61	+5V
B29	NC	B62	+5V
B30	NC		
B31	+3.3V		

Chapter 4

Introduction of BIOS

The BIOS is a program located in the Flash Memory on the motherboard. This program is a bridge between motherboard and operating system. When you start the computer, the BIOS program gains control. The BIOS first operates an auto-diagnostic test called POST (Power on Self Test) for all the necessary hardware, it detects the entire hardware devices and configures the parameters of the hardware synchronization. After these tasks are completed, BIOS will give control of the computer back to operating system (OS). Since the BIOS is the only channel for hardware and software to communicate with, it is the key factor of system stability and of ensuring your system performance at best.

4-1 Enter Setup


Power on the computer and press key immediately to enter Setup.

If the message disappears before your respond but you still wish to enter Setup, restart the system by turning it OFF then ON. You may also restart the system by simultaneously pressing <Ctrl>, <Alt> and <Delete> keys. If you do not press the keys at the proper time and the system does not boot, an error message will display and you will be asked to

Press <Ctrl-Alt-Esc> or to enter Setup

4-2 BIOS Menu Screen

The following diagram show a general BIOS menu screen

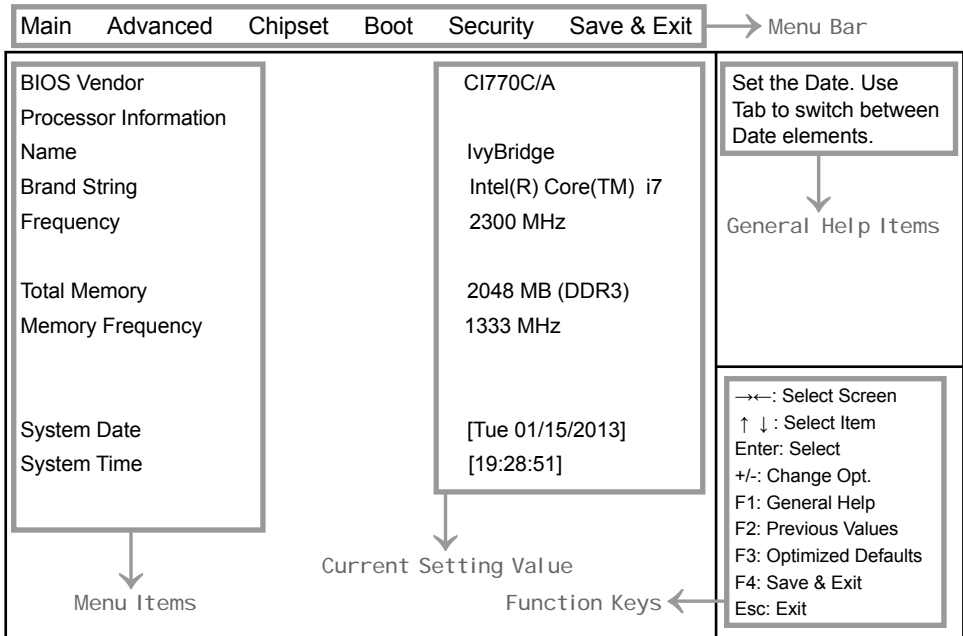

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

4-3 Function Keys

In the above BIOS Setup main menu of, you can see several options.

We will explain these options step by step in the following pages of this chapter, but let us first see a short description of the function keys you may use here:

- Press ←→ (left, right) to select screen;
- Press ↑↓ (up, down) to choose, in the main menu, the option you want to confirm or to modify.
- Press <Enter> to select.
- Press <+>/<-> keys when you want to modify the BIOS parameters for the active option.
- [F1]: General help.
- [F2]: Previous value.
- [F3]: Optimized defaults.
- [F4]: Save & Exit.
- Press <Esc> to quit the BIOS Setup.

4-4 Getting Help

Main Menu

The on-line description of the highlighted setup function is displayed at the top right corner the screen.

Status Page Setup Menu/ Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press <Esc>

4-5 Menu Bars

There are six menu bars on top of BIOS screen:

- Main** To change system basic configuration
- Advanced** To change system advanced configuration
- Chipset** To change chipset configuration
- Boot** To change boot settings
- Security** Password settings
- Save & Exit** Save setting, loading and exit options.
User can press the right or left arrow key on the keyboard to switch from menu bar.
The selected one is highlighted.

4-6 Main

Main Advanced Chipset Boot Security Save & Exit		
BIOS Vendor	CI770C/A	Set the Date. Use Tab to switch between Date elements.
Processor Information		
Name	IvyBridge	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit
Brand String	Intel(R) Core(TM) i7	
Frequency	2300 MHz	
Total Memory	2048 MB (DDR3)	
Memory Frequency	1333 MHz	
System Date	[Tue 01/15/2013]	
System Time	[19:28:51]	

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Main menu screen includes some basic system information. Highlight the item and then use the <+> or <-> and numerical keyboard keys to select the value you want in each item.

System Date

Set the Date. Please use [Tab] to switch between data elements.

System Time

Set the Time. Please use [Tab] to switch between data elements.

4-7 Advanced

Main **Advanced** Chipset Boot Security Save & Exit

<ul style="list-style-type: none">▶ ACPI Settings▶ S5 RTC Wake Settings▶ CPU Configuration▶ SATA Configuration▶ USB Configuration▶ SMART Settings▶ F71869 Super IO Configuration▶ F71869 H/W Monitor▶ F81216 Second Super IO Configuration▶ Serial Port Console Redirection▶ Network Stack	System ACPI Parameters.
	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

ACPI Settings

Please refer section 4-7-1

S5 RTC Wake Settings

Please refer section 4-7-2

CPU Configuration

Please refer section 4-7-3

SATA Configuration

Please refer section 4-7-4

USB Configuration

Please refer section 4-7-5

SMART Settings

Please refer section 4-7-6

F71869 Super IO Configuration

Please refer section 4-7-7

F71869 H/W Monitor

Please refer section 4-7-8

F81216 Second Super IO Super IO Configuration

Please refer section 4-7-9

Serial Port Console Redirection

Please refer section 4-7-10

Network Stack

Please refer section 4-7-11

4-7-1 ACPI Settings

Main **Advanced** Chipset Boot Security Save & Exit

ACPI Settings		Enables or Disables BIOS ACPI Auto Configuration.
Enable ACPI AUTO Configuration	[Disabled]	
Enable Hibernation	[Enabled]	
ACPI Sleep State	[S1 only(CPU Stop C..)]	→←: Select Screen ↑ ↓: Select Item Enter: Select +/: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Enable ACPI Auto Configuration

This item allows you to Enabled/Disabled the Advanced Configuration and Power Management (ACPI).

Enable Hibernation

This item allows you to Enabled/Disabled the Hibernate feature.

ACPI Sleep State

Select ACPI sleep state the system will enter when the SUSPEND button is pressed. The optional settings: Suspend Disabled / S1 only(CPU Stop Clock) / S3 only (Suspend to RAM) / Both S1 and S3 available for OS choose from.

4-7-2 S5 RTC Wake Settings

Main **Advanced** Chipset Boot Security Save & Exit

Wake system with Fixed Time	[Disabled]	Enable or disable System wake on alarm event. When enable, System will wake on the hr :: min :: sec specified
Wake system with Dynamic Time	[Disabled]	
		→←: Select Screen ↑ ↓ : Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Wake system with Fixed Time

Use this item to Enable or Disable system wake on alarm event. When set as Enabled, system will wake on the hour/min/sec specified.

Wake system with Dynamic Time

Use this item to Enable or Disable system wake on alarm event. When set as Enabled, system will wake on the current time + Increase minute(s).

4-7-3 CPU Configuration

Main **Advanced** Chipset Boot Security Save & Exit

CPU Configuration		Number of cores to enable in each processor package.
Intel(R) Core(TM) i7-3610QE CPU @ 2.30GHz		
CPU Signature	306a9	
Microcode Path	10	
Max CPU Speed	2300 MHz	
Min CPU Speed	1200 MHz	
CPU Speed	2300 MHz	
Processor Cores	4	
Intel HT Technology	Supported	
Intel VT-x Technology	Supported	
Intel SMX Technology	Supported	
64-bit	Supported	
L1 Data Cache	32 KB x 4	
L1 Code Cache	32 KB x 4	
L2 Cache	256 KB x 4	
L3 Cache	6144 KB	
Active Processor Cores	[All]	
Execute Disable Bit	[Enabled]	
Intel Virtualization Technology	[Disabled]	
		→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Active Processor Cores

Use this item to select number of cores to enable in each processor package.

Execute Disable Bit

XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.)

The optional settings are: Disabled, Enabled.

Intel Virtualization Technology

When set as Enabled, a VHM can utilize the additional hardware capabilities provided by Vanderpool Technology.

The optional settings: Enabled, Disabled.

4-7-4 SATA Configuration

Main **Advanced** Chipset Boot Security Save & Exit

SATA Controller(s)	[Enabled]	Enable or disable SATA Device.
SATA Mode Selection	[IDE]	
		→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

SATA Controller(s)

Use this item to Enable or Disable SATA Device.

SATA Mode Selection

Determine how SATA controller(s) operate.

The optional settings are: IDE Mode, AHCI Mode, RAID Mode.

4-7-4-1 SATA Mode Selection - AHCI Mode

Main **Advanced** Chipset Boot Security Save & Exit

SATA Controller(s)	[Enabled]	Enable or disable SATA Device.
SATA Mode Selection	[AHCI]	
SATA Controller Speed	[Gen3]	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit
▶ Software Feature Mask Configuration		

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

SATA Controller Speed

Indicates the maximum speed the SATA controller can support.
The optional settings: Gen1, Gen2, Gen3.

Software Feature Mask Configuration

Please refer section 4-7-4-1-1

4-7-4-1-1 ► Software Feature Mask Configuration

Main **Advanced** Chipset Boot Security Save & Exit

RAID0	[Enabled]	Enable or disable RAID0 feature.
RAID1	[Enabled]	
RAID10	[Enabled]	
RAID5	[Enabled]	
		→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

RAID0,RAID1,RAID10,RAID5

Enable or disable RAID0, RAID1, RAID10, RAID5 feature.
The optional settings: Enabled, Disabled.

4-7-4-2 SATA Mode Selection - RAID Mode

Main **Advanced** Chipset Boot Security Save & Exit

SATA Controller(s)	[Enabled]	Enable or disable SATA Device.
SATA Mode Selection	[RAID]	
SATA Controller Speed	[Gen3]	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit
► Software Feature Mask Configuration		
Alternate ID	[Disabled]	

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

SATA Controller(s)

SATA Mode Selection

SATA Controller Speed

► Software Feature Mask Configuration

Please refer section 4-7-4-1-1

Alternate ID

Report alternate Device ID

The optional settings: Enabled, Disabled.

4-7-5 USB Configuration

Main **Advanced** Chipset Boot Security Save & Exit

USB Configuration		Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. Disable option will keep USB devices available only for EFI applications.
USB Devices: 1 Keyboard, 2 Mice, 2 Hubs		
Legacy USB Support	[Enabled]	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit
USB3.0 Support	[Enabled]	
XHCI Hand-off	[Enabled]	
EHCI Hand-off	[Disabled]	

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Legacy USB Support

Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. Disable option will keep USB devices available only for EFI applications.

USB3.0 Support

Use this item to turn on/off USB3.0 Controller support.

The optional settings are: Enabled, Disabled.

XHCI Hand-off

This is a workaround for OSes without XHCI handoff support. The XHCI ownership change should be claimed by XHCI driver.

The optional settings are: Enabled, Disabled..

EHCI Hand-off

This is a workaround for OSES without EHCI handoff support. The EHCI ownership change should be claimed by EHCI driver.

The optional settings are: Enabled, Disabled.

4-7-6 SMART Settings

Main **Advanced** Chipset Boot Security Save & Exit

Smart Settings	Run SMART Self Test on all HDDs during POST.
Smart Self Test [Disabled]	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

SMART Self Test

Run Smart Self Test on all HDDs during POST.

The optional settings are: Disabled, Enabled.

4-7-7 F71869 Super IO Configuration

Main **Advanced** Chipset Boot Security Save & Exit

F71869 Super IO Configuration	Set Parameters of Serial Port 0(COMA)
F71869 Super IO Chip F71869 ▶ Serial Port 1 Configuration ▶ Serial Port 2 Configuration Power Failure [Keep last state]	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Serial Port 0 Configuration

Please refer section 4-7-7-1

Serial Port 1 Configuration

Please refer section 4-7-7-1

Power Failure

This item specifies whether your system will reboot after a power failure or interrupt occurs.

[Keep last state] Restores the system to the status before power failure or interrupt occurred.

[Bypass mode] Restores the system to the bypass mode.

[Always on] Leaves the computer in the power on state.

[Always off] Leaves the computer in the power off state.

4-7-7-1 ► Serial Port 1 Configuration & Serial Port 2 Configuration

Main **Advanced** Chipset Boot Security Save & Exit

Serial Port 1~2 Configuration		Enable or Disable Serial Port (COM)
Serial Port	[Enabled]	→←: Select Screen ↑ ↓ : Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit
Device Settings	IO=3F8h; IRQ=4;	
Change Settings	[AUTO]	
COM1 422/485 control flow	[Disabled]	

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Serial Port

Use this item to enable or disable serial port (COM).

The optional settings are: Enabled, Disabled.

Change Settings

Use this item to select an optimal setting for super IO device.

The optional settings are:

AUTO

IO=3F8h; IRQ=4;

IO=3F8h; IRQ=3,4,5,6,7,10,11,12;

IO=2F8h; IRQ=3,4,5,6,7,10,11,12;

IO=3E8h; IRQ=3,4,5,6,7,10,11,12;

IO=2E8h; IRQ=3,4,5,6,7,10,11,12;

COM1 422/485 control flow

Use this item to enable or disable serial port (COM) Autoflow

The optional settings are: Enabled, Disabled.

4-7-8 F17869 H/W Monitor

F17869 H/W Monitor

Press [Enter] to view PC health status.

This section shows the status of your CPU, Fan, and overall system.

This is only available when there is Hardware Monitor function onboard.

4-7-9 F81216 Second Super IO Configuration

Main **Advanced** Chipset Boot Security Save & Exit

F81216 Second Super IO Configuration		Set Parameters of Serial Port 3(COMC)
F81216 Second Super IO Chip	F81216 SecondIO	
▶ Serial Port 3 Configuration		→←: Select Screen
▶ Serial Port 4 Configuration		↑ ↓: Select Item
▶ Serial Port 5 Configuration		Enter: Select
▶ Serial Port 6 Configuration		+/-: Change Opt.
		F1: General Help
		F2: Previous Values
		F3: Optimized Defaults
		F4: Save & Exit
		Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Serial Port 3 Configuration

Please refer section 4-7-9-1

Serial Port 4 Configuration

Please refer section 4-7-9-1

Serial Port 5 Configuration

Please refer section 4-7-9-1

Serial Port 6 Configuration

Please refer section 4-7-9-1

4-7-9-1 Serial Port 3~6 Configuration

Main **Advanced** Chipset Boot Security Save & Exit

Serial Port 3~6 Configuration		Enable or Disable Serial Port (COM)
Serial Port Device Settings	[Enabled] IO=260h; IRQ=11;	
Change Settings COM3 422/485 control flow	[AUTO] [Disabled]	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Serial Port

Use this item to enable or disable serial port (COM).
The optional settings are: Enabled, Disabled.

Change Settings

Use this item to select an optimal setting for super IO device.
The optional settings are:

AUTO

IO=260h; IRQ=11;

IO=260h; IRQ=10,11,12;

IO=268h; IRQ=10,11,12;

IO=270h; IRQ=10,11,12;

IO=278h; IRQ=10,11,12;

COM3 422/485 control flow

Use this item to enable or disable serial port (COM) Autoflow
The optional settings are: Enabled, Disabled.

4-7-10 Serial Port Console Redirection

Main **Advanced** Chipset Boot Security Save & Exit

<p>Console Redirection [Disabled]</p> <p>► Console Redirection Settings</p>	<p>Console Redirection Enable or Disable.</p> <p>→←: Select Screen ↑ ↓ : Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit</p>
--	---

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Console Redirection

Use this item to enable or disable Console Redirection.
 The optional settings are: Enabled, Disabled.

4-7-11 Network Stack

Main **Advanced** Chipset Boot Security Save & Exit

<p>Network stack [Disabled Link]</p>	<p>Enable/Disable UEFI network stack.</p> <p>→←: Select Screen ↑ ↓ : Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit</p>
---	---

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Network Stack

Enable/Disable UEFI network stack.
 The optional settings are: Disable Link, Enable.

4-8 Chipset

Main Advanced **Chipset** Boot Security Save & Exit

<ul style="list-style-type: none"> ▶ PCH-IO Configuration ▶ System Agent (SA) Configuration 	<p style="text-align: center;">PCH Parameters</p> <p>→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit</p>
---	---

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

PCH-IO Configuration

Please refer section 4-8-1

System Agent (SA) Configuration

Please refer section 4-8-2

4-8-1 ▶ PCH-IO Configuration

Main Advanced **Chipset** Boot Security Save & Exit

<p>Intel PCH SKU Name QM77 Intel PCH Rev ID 04/C1</p> <ul style="list-style-type: none"> ▶ PCI Express Configuration ▶ USB Configuration ▶ PCH Azalia Configuration <p style="text-align: center;">Wake on LAN [Disabled]</p>	<p style="text-align: center;">PCI Express Configuration settings</p> <p>→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit</p>
--	---

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

PCI Express Configuration

Please refer section 4-8-1-1

USB Configuration

Please refer section 4-8-1-2

PCH Azalia Configuration

Please refer section 4-8-1-3

Wake on LAN

Use this item to enable or disable integrated LAN to wake the system.

4-8-1-1 ► PCI Express Configuration

Main Advanced **Chipset** Boot Security Save & Exit

PCI Express Configuration	PCI Express Configuration settings
► Mini PCIe 1 ► Mini PCIe 2 ► PCI Express x1 ► PCI Express x1	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Mini PCIe 1

Please refer section 4-8-1-1-1

Mini PCIe 2

Please refer section 4-8-1-1-1

PCI Express x1

Please refer section 4-8-1-1-2

PCI Express x1

Please refer section 4-8-1-1-2

4-8-1-1-1 ► Mini PCIe 1 / 2

Main Advanced **Chipset** Boot Security Save & Exit

PCI Express Root Port 3/4 PCIe Speed	[Enabled] [Gen1]	Control the PCI Express Root Port.
		→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

PCI Express Root Port 3/4

Control the PCI Express Root Port.
The optional settings are: Enabled, Disabled.

PCIe Speed

Select PCI Express port speed.
The optional settings are: Auto, Gen1, Gen2.

4-8-1-1-2 ► PCI Express x 1

Main Advanced **Chipset** Boot Security Save & Exit

PCI Express Root Port 7/8	[Enabled]	Control the PCI Express Root Port.
PCIe Speed	[Gen1]	
		→←: Select Screen ↑ ↓ : Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

PCI Express Root Port 7/8

Control the PCI Express Root Port.
The optional settings are: Enabled, Disabled.

PCIe Speed

Select PCI Express port speed.
The optional settings are: Auto, Gen1, Gen2

4-8-1-2 ► USB Configuration

Main Advanced **Chipset** Boot Security Save & Exit

USB Configuration		Enable or disable XHCI Pre-Boot Driver support.
XHCI Pre-Boot Driver	[Enabled]	
xHCI Mode	[Smart Auto]	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit
HS Port #1 Switchable	[Enabled]	
HS Port #2 Switchable	[Enabled]	
HS Port #3 Switchable	[Enabled]	
HS Port #4 Switchable	[Enabled]	
xHCI Streams	[Enabled]	
EHCI1	[Enabled]	
EHCI2	[Enabled]	
USB Ports Per-Port Disable Control	[Disabled]	

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

XHCI Pre-Boot Driver

Use this item to enable or disable XHCI Pre-Boot Driver Support.

xHCI Mode

Mode of operation of xHCI controller.

The optional settings are: Smart Auto, Enabled, Disabled.

HS Port #1 Switchable

HS Port #2 Switchable

HS Port #3 Switchable

HS Port #4 Switchable

Always for HS port switching between xHCI and EHCI. If disabled, port is routed to EHCI.

If HS port is routed to xHCI, the corresponding SS port is enabled.

The optional settings are: Disabled, Enabled.

xHCI Streams

Use this item to enable or disable xHCI Maximum Primary Stream Array Size.

The optional settings are: Disabled, Enabled.

EHCI1/ EHCI2

Use this item to enable or disable USB EHCI (USB 2.0) support.

One EHCI controller must always be enabled.

The optional settings are: Enabled, Disabled.

USB Port Pre-Port Disable Control

Use this item to control each of the USB ports (0~13) disabling.
The optional settings are: Disabled, Enabled.

4-8-1-3 ► PCH Azalia Configuration

Main Advanced **Chipset** Boot Security Save & Exit

PCH Azalia Congiguration		Control Detection of the Azalia device.
Azalia	[Auto]	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit
Azalia Internal HDMI Codec	[Enabled]	
Azalia HDMI Codec	[Enabled]	

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Azalia

Use this item to enable, disable or auto control detection of the Azalia device.

Azalia Internal HDMI Codec

Use this item to enable or disable internal HDMI codec for Azalia.

Azalia HDMI Codec

Use this item to enable or disable internal HDMI codec Port for Azalia.

4-8-2 ► System Agent (SA) Configuration

Main Advanced **Chipset** Boot Security Save & Exit

System Agent Bridge Name	IvyBridge	Config Graphics Settings.
System Agent RC Version	1.2.0.0	
► Graphics Configuration		→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Graphics Configuration

Please refer section 4-8-2-1

4-8-2-1 ► Graphics Configuration

Main Advanced **Chipset** Boot Security Save & Exit

Graphics Configuration		Graphics turbo IMON current values supported (14-31)
IGFX VBIOS Version	2170	
IGfx Frequency	350 MHz	
Graphics Turbo IMON Current	31	
Aperture Size	[256MB]	→←: Select Screen
DVMT Pre-Allocated	[64M]	↑ ↓: Select Item
DVMT Total Gfx Mem	[256M]	Enter: Select
► LCD Control		+/-: Change Opt.
		F1: General Help
		F2: Previous Values
		F3: Optimized Defaults
		F4: Save & Exit
		Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Aperture Size

The optional settings are: 128MB,256MB,512MB.

DVMT Pre-Allocated

Use this item to select DVMT 5.0 pre-allocated (fixed) graphics memory size used by the internal graphics device.

The optional settings are:

32/64/96/128/160/192/224/256/288/320/352/384/416/448/480/512/1024M

DVMT Total Gfx Mem

Use this item to select DVMT 5.0 total graphics memory size used by the internal graphics device.

The optional settings are:128M, 256M, MAX

LCD Control

Please refer section 4-8-2-1-1

4-8-2-1-1 ► LCD Control

Main Advanced **Chipset** Boot Security Save & Exit

Graphics Configuration		Select the Video Device which will be activated during POST. This has no effect if external graphics present. Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display
Primary IGFX Boot Display	[CRT]	
Secondary IGFX Boot Display	[LVDS]	
LCD Panel Type	[1024x768 LVDS1]	
Panel Color Depth	[18 Bit]	
		→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Primary IGFX Boot Display

Select the Video Device which will be activated during POST. This has no effect if external graphics present. Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display.

The optional settings are: VBIOS Default, CRT, HDMI, LVDS, DVI.

Secondary IGFX Boot Display

The optional settings are: Disabled, CRT, HDMI, LVDS, DVI.

LCD Panel Type

This item allows you to select the panel resolution

This item allows you to select the panel resolution

1. VBIOS Default
2. 1024 X 600 LVDS
3. 800 X 600 LVDS
4. 1024 X 768 LVDS1
5. 1280 X 1024 LVDS
6. 1440 X 1050 (RB) LVDS1
7. 1440 X 1050 LVDS2
8. 1600 X 1200 LVDS
9. 1366 X 768 LVDS
10. 1680 X 1050 LVDS
11. 1920 X 1200 LVDS
12. 1440 X 900 LVDS
13. 1600 X 900 LVDS
14. 1024 X 768 LVDS2
15. 1280 X 800 LVDS
16. 1920 X 1080 LVDS
17. 2048 X 1536 LVDS

Panel Color Depth

Use this item to select the LFP Panel Color Depth 18Bit or 24Bit.

4-9 Boot

Main Advanced Chipset **Boot** Security Save & Exit

Boot Configuration		Select the keyboard NumLock state.
Bootup NumLock State	[On]	
Quiet Boot	[Enabled]	
CSM16 Module Version	07.69	
GateA20 Active	[Upon Request]	
Boot Option Priorities		
▶ CSM parameters		
		→←: Select Screen ↑ ↓ : Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Bootup NumLock State

Use this item to select keyboard NumLock State.

The optional settings are: On, Off.

Quiet Boot

The optional settings are: Enabled, Disabled.

Administrator Password & User Password

To set up an administrator password:

1. Select Administrator Password. The screen then pops up an Create New Password dialog.
2. Enter your desired password that is no less than 3 characters and no more than 20 characters.
3. Hit [Enter] key to submit.

4-11 Save & Exit

Main Advanced Chipset Boot Security **Save & Exit**

Save Changes and Reset	Reset the system after saving the changes.
Restore Defaults	
Boot Override	→←: Select Screen ↑ ↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit Esc: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Save Changes and Reset

This item allows user to reset the system after saving the changes.

Restore Defaults

Use this item to restore load default values for all the setup options.


Chapter 5

DRIVER INSTALLATION

There is a system installation DVD in the package. This DVD does not only include all the drivers you need but also some other free application programs and utility programs. In addition, this DVD also includes an auto detect software telling you which hardware is installed and which driver is needed so that your system can function properly. We call this auto detect software SYSTEM INSTALL.

SYSTEM INSTALL Supports Windows XP / Windows 7 / Windows 8 / 8.1

Insert the DVD into your DVD-ROM drive and the SYSTEM INSTALL menu should appear as below. If the menu does not appear, double-click MY COMPUTER and double-click DVD-ROM drive or click START, click RUN, and type X:\SETUP.EXE (assuming your DVD-ROM drive is X).

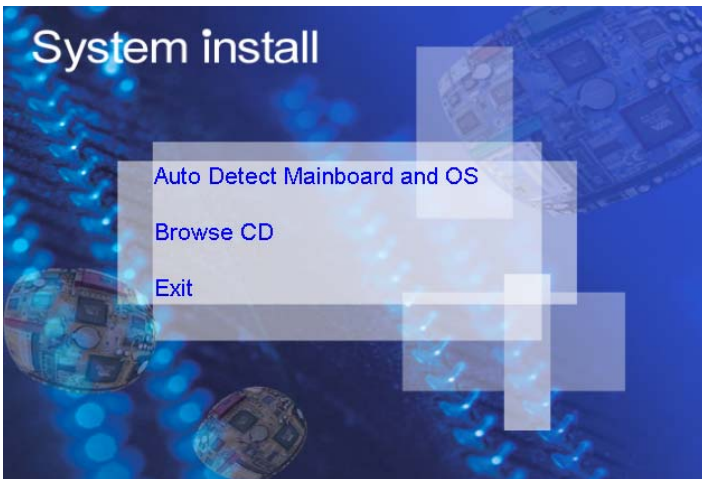

Make your selection from SYSTEM INSTALL menu:


- 1 . Auto Detect Main board and OS to AUTOMATIC DRIVER INSTALLATION menu
- 2 . Browse DVD to view the contents of the DVD
3. Exit to exit SYSTEM INSTALL menu

AUTOMATIC DRIVER INSTALLATION menu



1. INF install Intel Ivy Bridge chipset driver
 2. VGA install onboard VGA driver
 3. SOUND install VIA HD Audio Codec driver
 4. LAN to the LAN driver Readme file
 5. COM to the COM driver Readme file
 6. USB 3.0 install Intel USB 3.0 extensible Host Controller driver
- Each selection is illustrated below:

5-1 INF Install Intel Ivy Bridge Chipset Driver

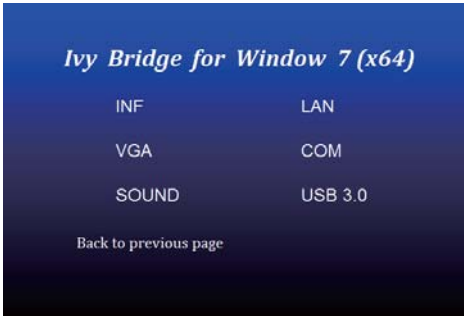


1. At the "AUTOMATIC DRIVER INSTALLATION menu" screen, click "INF".




2. At the "Intel® Chipset Device Software" screen, click "Next".



3. At the "License Agreement" screen, click "Yes".

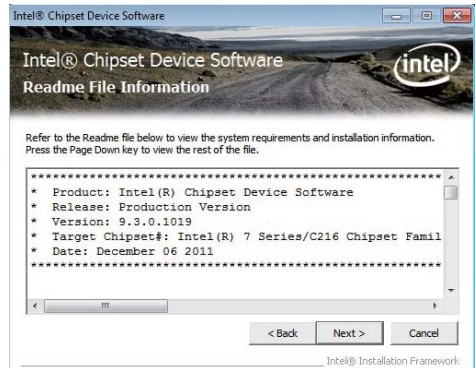

4. At the "Readme File Information" screen, click "Next".

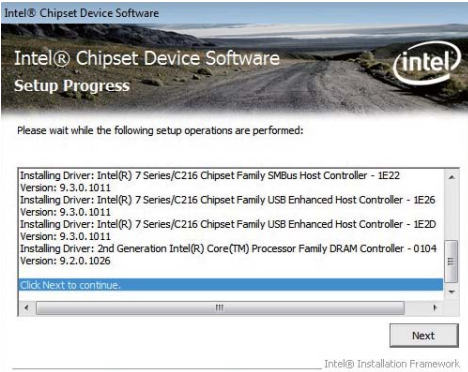

5. Click "Next"



6. Click "Finish" to restart computer.

NOTE: SYSTEM INSTALL will auto detect file path

For Windows XP 64/32-bit, Windows 7 64/32-bit and windows 8 64/32-bit


X:\driver\INTEL\IVY_SAN\infininst_autol.exe

For Windows 8.1 64/32-bit


5-2 VGA Install Intel Ivy Bridge VGA Driver




1. At the "AUTOMATIC DRIVER INSTALLATION menu" screen, click "VGA".

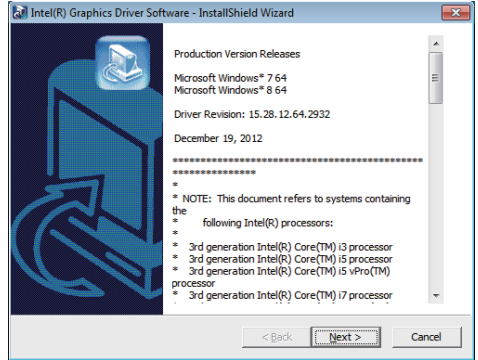


2. At the "Intel® HD Graphics Driver" screen, click "Next".

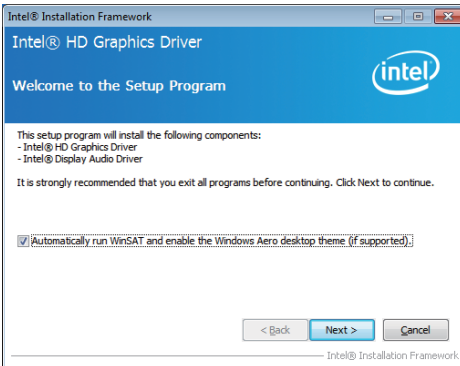


3. At the "Welcome to the Setup Program" screen, Click "Next"

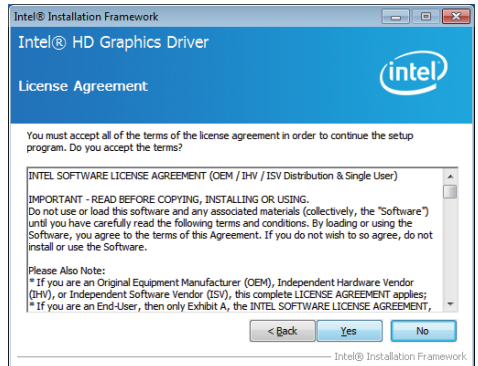


4. At the "License Agreement" screen, Click "Yes".

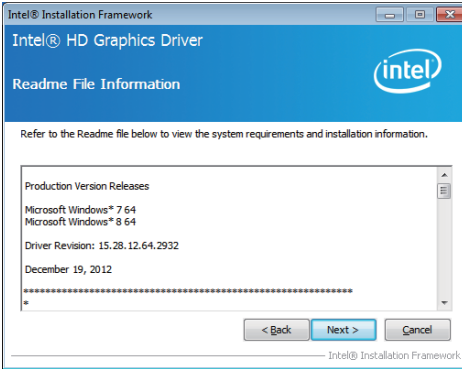

5. At the "Readme File Information" screen, Click "Next".

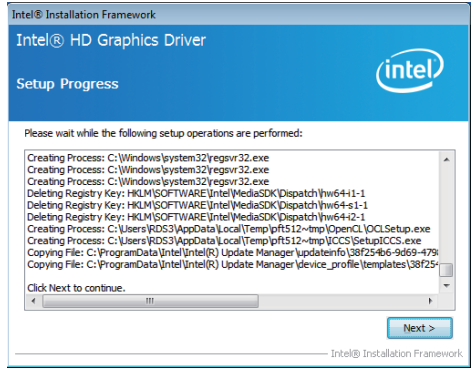

6. At the "Setup Progress" screen, Click "Next".

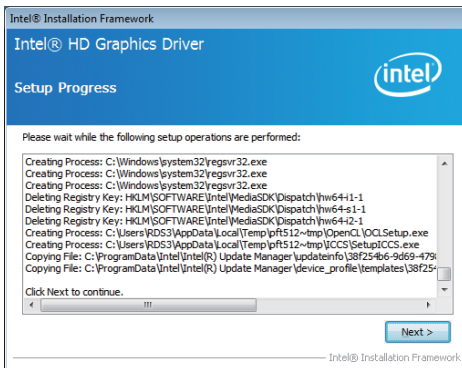

7. Click "Finish" to restart computer

NOTE: SYSTEM INSTALL will auto detect file path

For Windows XP 64bit

X:\driver\INTEL\IVY_SAN\vgalwinxp64\winxp64_145110.exe

For Windows XP 32bit

X:\driver\INTEL\IVY_SAN\vgalwinxp\winxp_145110.exe

For Windows 7 64bit and Windows 8 64bit

X:\driver\INTEL\IVY_SAN\vgal WIN_7_8_64\ win64_152812.exe

For Windows 7 32bit and Windows 8 32bit

X:\driver\INTEL\IVY_SAN\vgal WIN_7_8_32\ win32_152812.exe



For Windows 8.1 64bit

X:\driver\INTEL\IVY_SAN\vgalWIN8.1\SAN\x64\ Setup.exe

For Windows 8.1 32bit


X:\driver\INTEL\IVY_SAN\vgalWIN8.1\SAN\x86\Setup.exe

5-3 SOUND Install Realtek High Definition Audio Driver

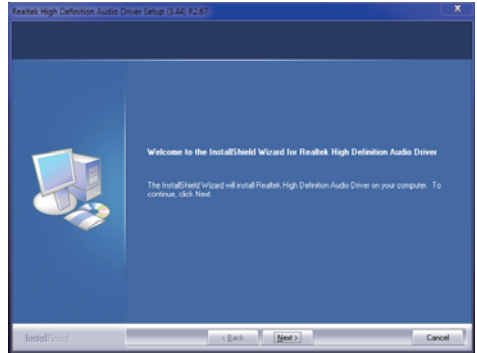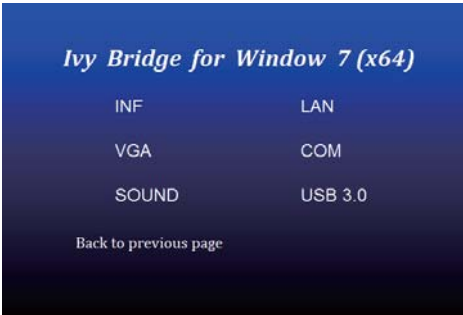

1. At the "AUTOMATIC DRIVER INSTALLATION menu" screen, click "SOUND".

2. Click "Next".

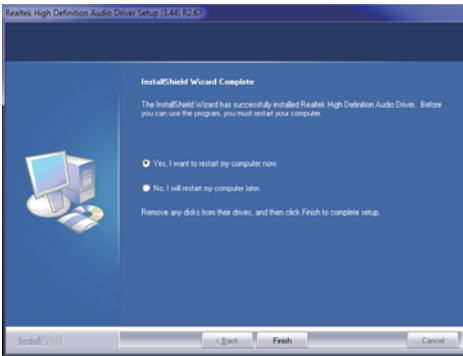

3. Click "Finish" to restart computer

NOTE: SYSTEM INSTALL will auto detect file path

For Windows XP 32/64 bit

X:\driver\INTEL\IVY_SAN\SOUND\WDM_R270.exe

For Windows 7 32/64 bit and Windows 8 32/64 bit

X:\driver\INTEL\IVY_SAN\SOUND\Vista_Win7_Win8_R270.exe


For Windows 8.1 32bit

X:\driver\INTEL\IVY_SAN\SOUND\Win8.1\32bit_Win7_Win8_Win81_R273.exe


For Windows 8.1 64bit

X:\driver\INTEL\IVY_SAN\SOUND\Win8.1\64bit_Win7_Win8_Win81_R273.exe


5-4 USB 3.0 Install Intel USB 3.0 extensible Host Controller Driver

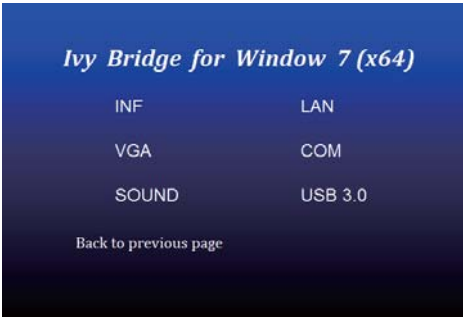


1. At the "AUTOMATIC DRIVER INSTALLATION menu" screen, Click "USB 3.0".

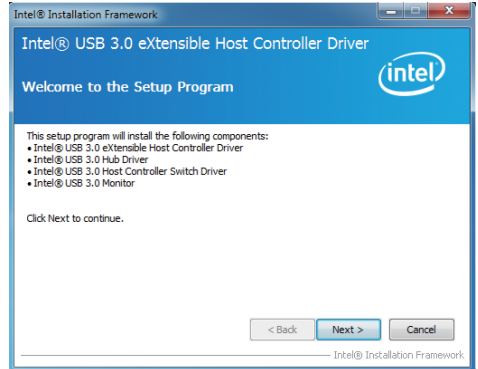


2. At the "Intel@ USB 3.0 extensible Host Controller Driver" screen, Click "Next".

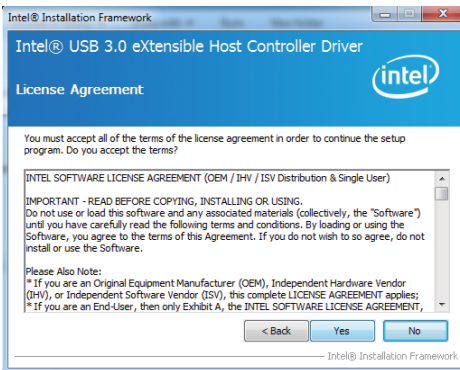

3. At the "License Agreement" screen, Click "Yes".

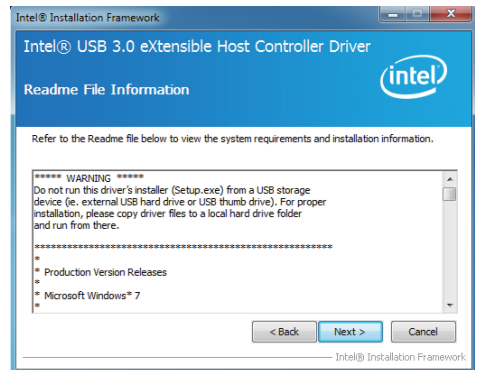

4. At the "Readme File Information" screen, Click "Next".

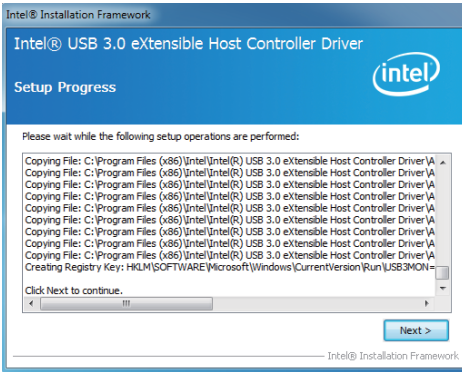


5. Click "Next"

NOTE: The path of the file
For Windows 7 32/64-bit
X:\driver\INTEL\IVY_SAN\USB3_0\INTEL\Setup.exe




6. Click "Finish" to restart computer


5-5 ME Install Intel Management Engine Interface Driver

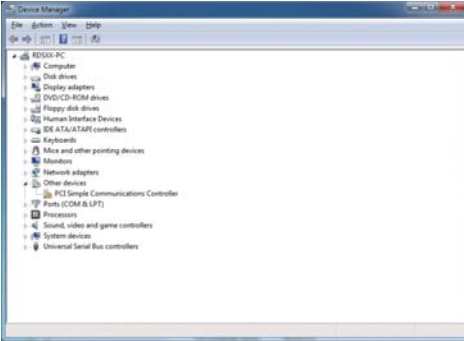


1. Please Check Device Manager "PCI Simple Communications Controllers"

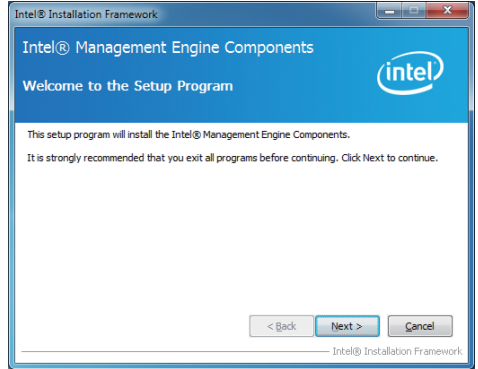

2. At the "Intel® Management Engine Components" screen, Click "Next".

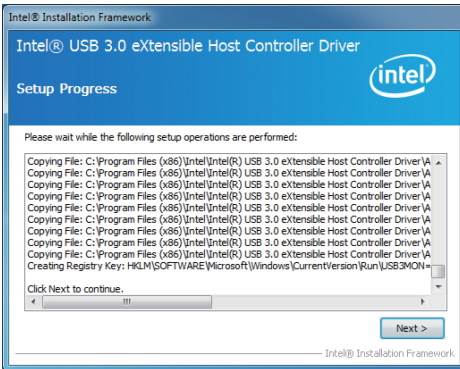


3. At the "Setup Progress" screen, Click "Next"

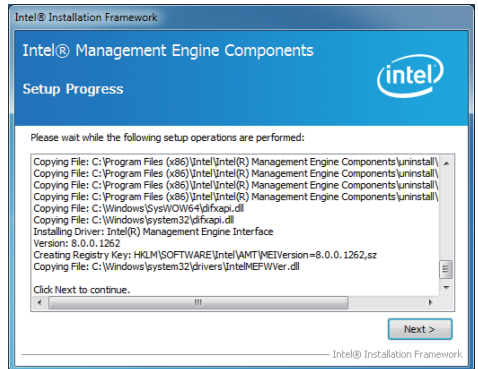


4. Click "Next"

5-6 How to update AMI BIOS


Step 1. To run afuwingui.exe then click "Open"

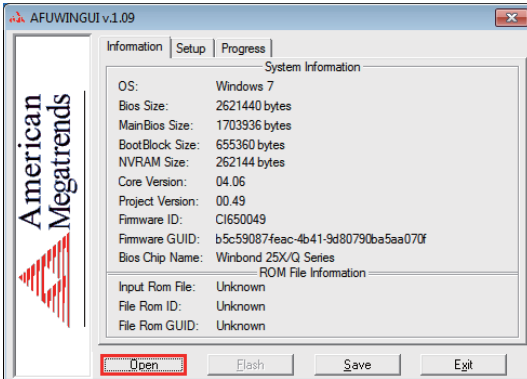


Step 2. Click the new version BIOS (download from the website)

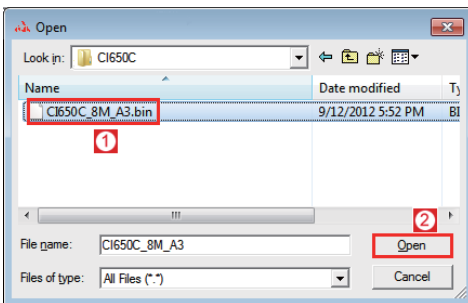


Step 3. Choose "ProgramAll Blocks" and "Do Not Check ROM ID"

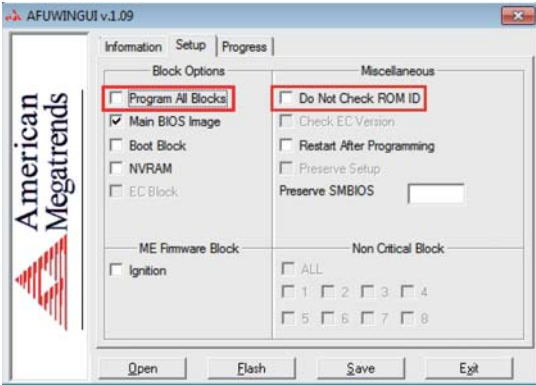

Step 4. Click "Flash"

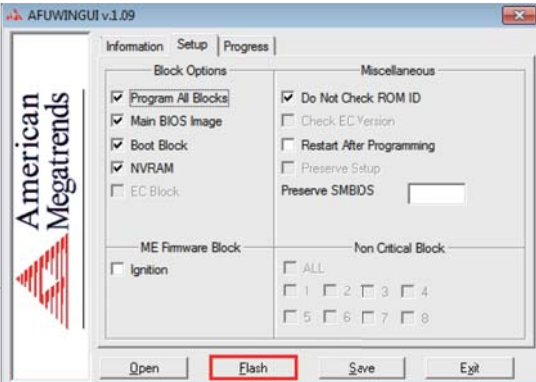

Step 5. Click "Exit" and restart computer.

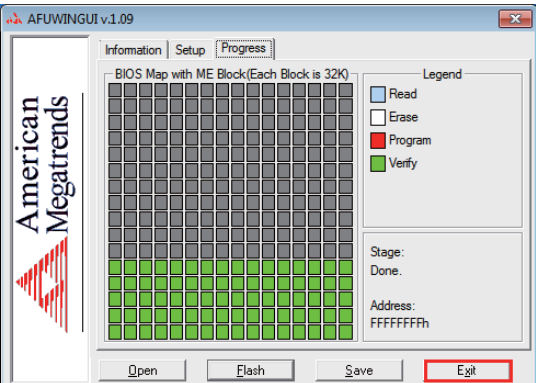

Appendix A: Power Consumption Test

Condition

Item	Spec
CPU	i7-3610QE, i5-3610ME
SDRAM	DDR3 1600 / 16GB
Operating System	Windows 7
Test Program	3D Mark 11 Advanced Edition
HDD 3.5" SATA	Standard HDD
HDD 2.5" SATA	Slim Type HDD

Test Result for reference !

Hard Disk	Processor Number	Power off	Start up		Operation Maximum	Shut down Maximum
			Maximum	Stable		
Standard HDD	i7-3610QE	0.1A	3.35A	1.52A	4.99A	2.33A
	i5-3610ME	0.1A	2.89A	1.45A	4.04A	2.36A
Slim Type HDD	i7-3610QE	0.1A	2.98A	1.16A	4.81A	1.99A
	i5-3610ME	0.1A	2.54A	1.1A	3.75A	1.72A

The power consumption depends on your device choice!

Appendix B: Resolution list

640 x 480 x (256 / 16bit / 32bit)
800 x 600 x (256 / 16bit / 32bit)
1024 x 768 x (256 / 16bit / 32bit)
1152 x 864 x (256 / 16bit / 32bit)
1280 x 600 x (256 / 16bit / 32bit)
1280 x 720 x (256 / 16bit / 32bit)
1280 x 768 x (256 / 16bit / 32bit)
1280 x 800 x (256 / 16bit / 32bit)
1280 x 960 x (256 / 16bit / 32bit)
1280 x 1024 x (256 / 16bit / 32bit)
1400 x 1050 x (256 / 16bit / 32bit)
1440 x 900 x (256 / 16bit / 32bit)
1600 x 900 x (256 / 16bit / 32bit)
1600 x 1200 x (256 / 16bit / 32bit)
1680 x 1050 x (256 / 16bit / 32bit)
1920 x 1080 x (256 / 16bit / 32bit)
1920 x 1200 x (256 / 16bit / 32bit)